

# Manual

## ViscoTwin 130 HP 3A



Release: Sep 27, 2018



## Table of Content

- 1 Safety notes
  - 2 Construction and general description
  - 3 Transport, packaging, storage
  - 4 Assembly / installation
  - 5 Commissioning
  - 6 Placing out of operation
  - 7 Maintenance and servicing
  - 8 Disturbances and their elimination
  - 9 Disassembly and assembly
  - 10 Stocking of spare parts
- Appendix
- Tools and expendables required for maintenance and servicing
  - Tools and expendables maintenance level 1
  - Tools maintenance level 2
  - Tools maintenance level 3
  - Lubricants (sourcing in the USA)
  - Exploding drawings with index
  - The Engineering Design and Technical Construction File
    - CIP | SIP | Manual Cleaning
    - Oil change
  - Tightening torque values

All rights, also reproduction in the form of extracts thereof reserved.

All information is supplied without any liability.

## Chapter 1

### 1. Safety notes

#### 1.1 Important notes

- Read these instructions before assembly and initial operation.
- They describe the safe use of the pump in all life cycles.
- Heed the safety notes contained without fail
- Do not put damaged products into operation

**The notes on safe and undisturbed operation are designated as follows:**

| Symbol                                                                                                                                                                                                                                                    | Signal word | Meaning                                                | Consequences of disregard                                   |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------|--------------------------------------------------------|-------------------------------------------------------------|
| <p>Example.</p>  <p>General hazard</p>  <p>Specific hazard,<br/>e.g. electric shock</p> | Danger      | Imminent danger                                        | Severe or fatal injury                                      |
|                                                                                                                                                                                                                                                           | Warning!    | Possible dangerous situation                           | Severe or fatal injury                                      |
|                                                                                                                                                                                                                                                           | Caution!    | Possible dangerous situation                           | Minor injuries                                              |
|                                                                                                                                                                        | Note!       | Potential damage to property                           | Damage to pump or plant system                              |
|                                                                                                                                                                        | Note!       | Important notes on explosion prevention and protection | Neutralizing the explosion protection and resulting dangers |
|                                                                                                                                                                        | Note!       | For safe and undisturbed operation                     |                                                             |

#### 1.2 Qualified personnel

The operating company has to instruct the operator by means of this operating manual. The minimum age is 16 years. An experienced person has to supervise young persons and apprentices during the work on the machine.

Only metal workers, industrial mechanics or persons with comparable education may perform assembly, maintenance, initial commissioning, and repair work on the screw pump.

All electro technical work may only be performed by a trained electrically qualified person. Electrically qualified person in the sense of this manual are individuals who are familiar with electrical installation, commissioning, troubleshooting, and maintenance and hold a corresponding qualification for this function.

All work in the other fields, transport, storage, operation, and disposal may only be carried out by individuals who know the manual and have been appropriately instructed.

Make sure that the applicable standards and regulations of the respective country of use are kept and monitored.

## Chapter 1

### 1.3 Further applicable documents

Heed the following additional documents:

| Document                        | Description                                                               |
|---------------------------------|---------------------------------------------------------------------------|
| Data sheet                      | Technical data, performance and operating limitations, service conditions |
| Dimensional drawing             | Pump dimensions and connections with mounting points                      |
| Spare parts lists               | Exploded drawing with spare parts                                         |
| Assembly instructions           | Special models or incomplete machine                                      |
| ATEX supplementary instructions | Operating the pump in explosion hazardous area                            |
| Drive documentation             | Drive Operating Manual                                                    |
| Accessories documentation       | Accessories Operating Manual                                              |
| Declaration of decontamination  | Shipping the pump for repair                                              |

### 1.4 Safety Notes for Commissioning, Maintenance, Inspection and Installation works.

|                                                                                   |                                                                                                                                                                                                 |
|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <b>Warning!!</b>                                                                                                                                                                                |
|                                                                                   | <p>The pump has live, pressurized, pressure-retaining and rotating or moved machine parts and possibly hot surfaces during operation.<br/>Potential consequences: Severe or fatal injuries.</p> |

- Principally perform any necessary work on the machine when the system is at a standstill.
- Disconnect the electric drive from mains and secure against unauthorised and inadvertent activation.
- Make sure prior to opening the pump that the system and its auxiliary systems are in the no-pressure state.
- Keep in mind that the pump may possibly have hot surfaces during and after operation.
- Follow the regulations on handling the pumping medium when opening the pump.
- Reattach all protection devices before restarting.
- Heed the points stated in Chapter 'Commissioning' when restarting.

|                                                                                     |                                                                                                                               |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------|
|  | <b>Warning!</b>                                                                                                               |
|                                                                                     | <p>Risk of injuries through falling or tipping heavy machine parts.<br/>Potential consequences: Severe or fatal injuries.</p> |

- The pump or parts of it may be very heavy and need to be moved using appropriate lifting gear.

## Chapter 1

### 1.5 Intended Use

The ViscoTwin pump is intended for commercial use and may only be employed for delivery of the agreed pumping media in accordance with this manual.

If known to the manufacturer, designated operation points for designated pumps are specified in data sheets. Any change of the operating conditions (e.g. by different process design, flow rate, pipe length and diameter, pressure, additional valves, throttle devices etc.) may result in a significant change of operating points (operating points follow operating conditions). In this case, compare new operating conditions and operating points with application data indicated in data sheets and with operation restrictions specified in this manual (see chapter 1.7). In no way, operating restrictions specified by the manufacturer may be exceeded (chapter 1.7). It is recommended to review new operating conditions and operating points in collaboration with the manufacturer.

Deployment in the Ex area is prohibited unless expressly intended for this purpose. Foreign bodies in the medium are improper change in operating conditions. They are to prevent with suitable measures such as magnetic separators and filters, and others.

The resistance of various sealing materials to some common pumping media is shown in the following table. Because each sealing material can vary in resistance you shall consult the pump manufacturer before choosing the sealing material.

Characteristics of resistance

| Material | organic acid | inorganic acid | Alkaline    | Oil + Fat   | polar solvents | Non-polar solvents | steam       | alcohol     | Amine       |
|----------|--------------|----------------|-------------|-------------|----------------|--------------------|-------------|-------------|-------------|
| EPDM     | well usable  | well usable    | excellently | do not use  | excellently    | do not use         | excellently | excellently | well usable |
| FKM      | do not use   | excellently    | do not use  | excellently | do not use     | well usable        | excellently | well usable | do not use  |

- Organic acids: e.g. citric acid or formic acid
- Inorganic acids: e.g. Nitric acid or hydrochloric acid
- Polar solvents: e.g. acetone
- Non-polar solvents: e.g. methyl ethyl ketone
- In case of equivocality consult the manufacturer.
- Deployment in the Ex area is prohibited unless not expressly intended for this purpose.
- [Ensure for 3-A application the use of only 3-A certified elastomers Standard 18-03 class I.](#)

### 1.6 Predictable Misuse

- Only use the pump to deliver the specified medium.
- Do not operate the pump beyond the specified speed range.
- The solids contents in the pumping medium must not exceed the specified limit values for grain size and proportion of solids.
- Take appropriate measures to ensure that no foreign objects (metal parts, stones, etc.) can get into the pump and possibly cause damage.
- Do not use the stationary pump as shut-off device.

## Chapter 1

### 1.7 Operating restrictions

Unless expressly specified differently by the manufacturer in writing, following limits apply:

|                            |           |
|----------------------------|-----------|
| Max differential pressure: | 400 psi   |
| Speed:                     | 3'000 rpm |

The ViscoTwin screw pump is a positive displacement pump that can build up very high pressure. The developing pressure with the delivery line shut can reach the multiple of the permissible system pressure. This may result in serious damage to system components posing a risk to persons.

#### **ATTENTION**

#### **Possible damage to property**

- **Do not operate against closed shut-off devices!**  
**Breakage and risk of injuries!**
- **Secure the pump through approved safety devices (overpressure protection).**
- Keep the relevant safety and handling instructions when delivering dangerous media.
- Medium contamination through foreign objects may result in damage to the pump elements.
- Observe the relevant legal requirements and the possibly resulting requirements and restrictions when delivering and storing hazardous substances and inflammable liquids.

### 1.8 Specific safety notes

Provide constructional contact protection for hot and cold parts. Provide appropriate earth in case of a possible electrostatic charge.



#### **Danger!**

**Rotating screw spindles in the pump can draw in arms or other parts of the body.  
Imminent danger: Severe or fatal injuries.**

- **Access into the pump during operation must not be possible.**
- **The running screw spindles can cause serious hand and personal injuries.**
- **Only operate the pump when mounted (connected to a piping system).**
- **Be sure to secure the openings (pressure and suction port) when running a possibly necessary test run.**
- **Only perform manual cleaning and maintenance work after disconnecting the drive (system (control) from mains and protecting it from inadvertent and unauthorised reclosure.**

### 1.9 Specific safety notes on pumps with heating jacket

The housing of these pumps is of double jacket design and has connections for heating medium flow. The housing has been designed for **6 bar** overpressure if no other internal pressure has been approved in the data sheet.

Use for the inlet- and outlet connection of the heating circuit the connectors on the opposite according to the nozzle. The connectors on the nozzle side can be used for the vent or a pressure measurement.

#### **ATTENTION**

#### **Possible damage to property**

- **Operate the heating circuit exclusively using water.**  
**Make sure by corresponding pressure limiting devices that the approved pressure rating for the housing will not be exceeded. The medium escaping via the relief port has to be discharged safely into a pressure less area when the pressure limiting device is responding. No shut-off devices are allowed to be arranged in this area.**


## Chapter 2

### 2. Construction and general description

#### 2.1 ViscoTwin pump construction



- only exemplary representation. Decisive for the dimension is the (dimensional drawing)
- 3-A baseframe according to 3-A requirements as per drawing #

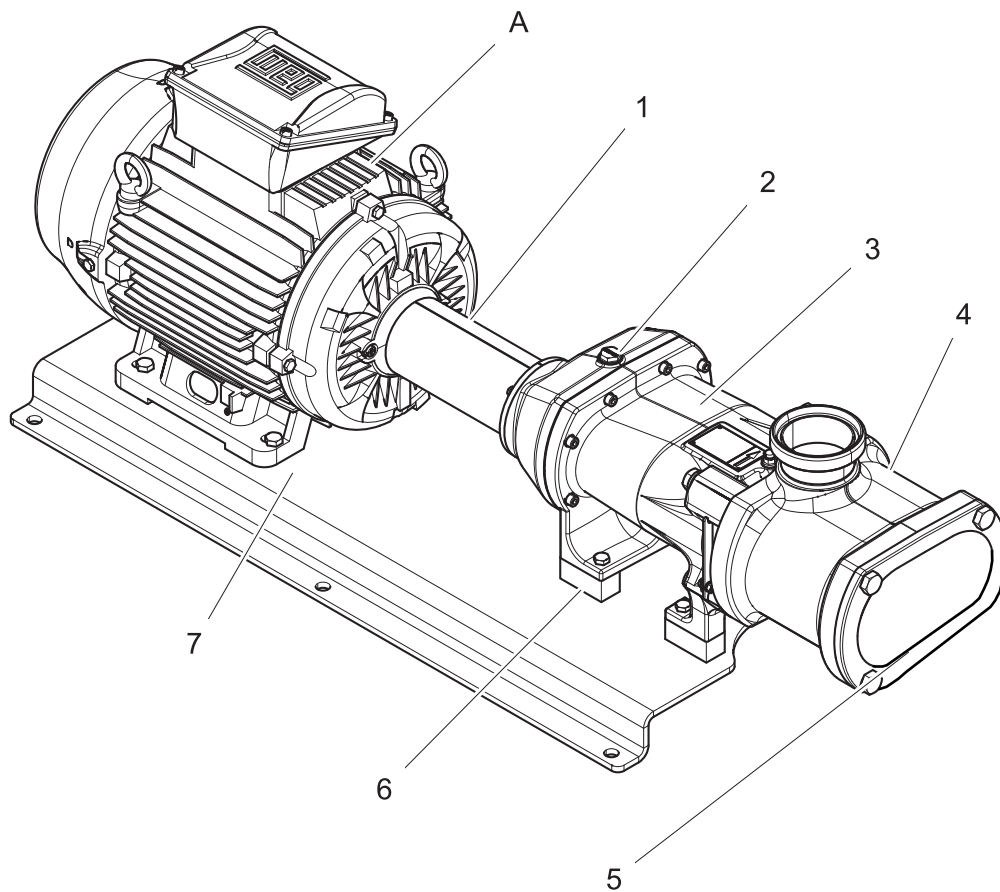

- A Drive
- 1 Coupling with guard
- 2 Gear housing
- 3 Bearing housing
- 4 Pump casing
- 5 Cover
- 6 Pump foot
- 7 Base plate

## Chapter 2

### 2.2 General description

ViscoTwin Screw pumps are rotating displacement pumps for delivering low to highly viscose media.

Pumps for use in the foodstuffs and beverage industry are designed and built to the recommendations of DIN EN 1672-2 'Food processing machinery - Basic concepts'. This does not include pipe connections, which require special cleaning procedures. These must be cleaned manually by the operator. The cleaning cycle is dependent on the food and the relevant hazard from. This is set by the operator. Correspond to the pipe connections according to DIN 11864, according to DIN EN 1672-2 there is no health risk. The operator does not define any special cleaning measures.

Non-corroding materials suitable for cleaning and/or disinfection are being used for the product-contacting parts of these pumps. Elastomer materials and seals correspond to the BfR (German Federal Institute for Risk Assessment) recommendations and the FDA guidelines respectively (US Food and Drug Administration) and the Regulation (EC) No 1935/2004.

The pumps and pump units respectively are designed and built taking the health and safety requirements of the EC Machinery Directive into account with all requirements met, either the EC Declaration of Conformity (with CE mark) or in the case of partly completed machines, a Declaration of Incorporation is issued.

Processtec, Inc. is assuring the conformity of 3-A standard 02-11 for the pumps delivered to 3-A requiring purposes and verifies all parts and elastomer fulfill the sanitary standards also for spare parts.

### 2.3 Sound emission

Each pump is manufactured and tested acc. to the currently valid technical documentation. The weighted continuous sound level is normally <70 dB(A) with drive and pipe lines not included in this measurement. Cavitation-free operation and proper fastening of the pump unit on level concrete slab or warp resistant steel structure is taken for granted.

## Chapter 3

### 3. Transport, packaging, storage

#### 3.1 Transport / packaging

ViscoTwin pumps are shipped in non-returnable packaging. Any transport damage has to be immediately reported to the transport company after receipt of the consignment. Do not put damaged products into operation

|  |                                                                                                                       |
|--|-----------------------------------------------------------------------------------------------------------------------|
|  | <b>Warning!</b>                                                                                                       |
|  | <b>The pump can drop or tilt as a result of improper transport. Potential consequences: Severe or fatal injuries.</b> |

- Use only hoisting gear and load-carrying equipment with sufficient load capacity.
- Lift pumps with suitable load-carrying equipment (chains, ropes) properly acc. to opposing pictures using hoisting gear.

|  |                                          |
|--|------------------------------------------|
|  | • The pictures used are example pictures |
|  |                                          |

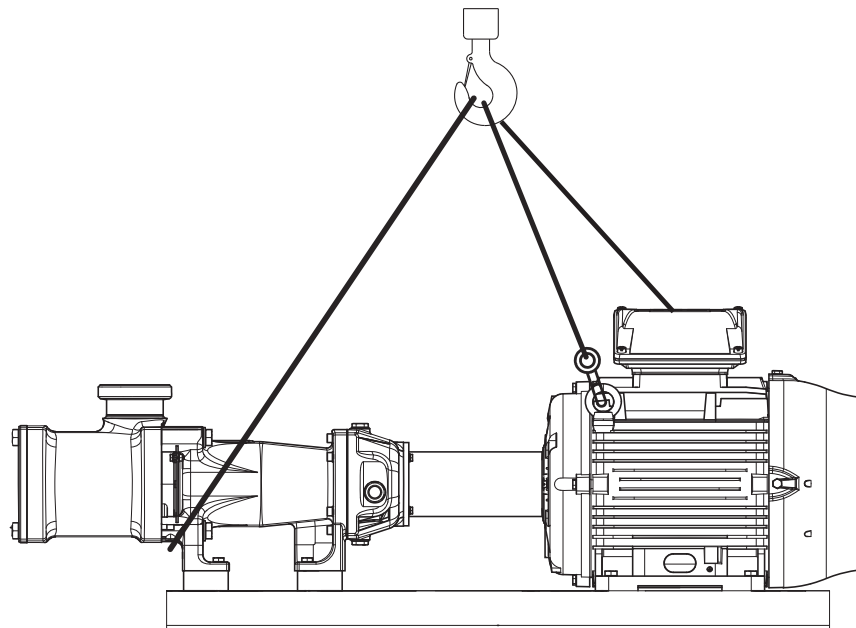


Fig. 3.1 ViscoTwin 130 with baseplate and drive

|                  |                                    |
|------------------|------------------------------------|
| <b>ATTENTION</b> | <b>Possible damage to property</b> |
|------------------|------------------------------------|

- When transporting pump units, consider that they can be very top heavy due to certain drive assemblies.
- Never lift the whole unit using the lifting eye bolts of the drive unit. These suspension points should only be used for the motor and/or gear unit.
- Always transport screw pumps in horizontal position.

## Chapter 3

### 3.2 Storage

ViscoTwin pumps are sufficiently preserved under normal environmental conditions.

Take the following measures when storing for a longer period;

- **Protect pump from dust, dirt, water, and other harmful environmental influences. Coat all non-painted surfaces with acid-free and resin-free grease.**
- **Do not grease stainless steel parts and non-metallic parts.**
- **Cover all openings of pressure and suction ports.**
- **Drain water when using it as quench medium for shaft seal.**
  1. Make sure that the storage room meets the following conditions:
    - frost-protected and dry.
  2. Check the preservation regularly.

### 3.3 Disposal

Collect oil from gear unit and seals and dispose of acc. to the local regulations

#### 3.3.1 Final decomposition of the pump, sorting

Check parts for applicability as spare parts and optionally store it.

Dispose of casing parts, screw spindles, shaft seals as steel scrap (VA scrap).

O-rings and parts of the rotating mechanical seals made from carbon/ceramics as residual waste.

## Chapter 4

### 4. Assembly / installation

#### 4.1 Rotational direction

The rotational direction of the drive shaft determines the direction of flow. The rotational direction is stated on the data sheet and on the pump casing / coupling guard.

#### 4.2 Speed and torque of the pump

The permissible speed and the maximum torque on the clutch shaft of the screw pumps are shown in the following table:

| Type of pump        | Min. Rotation | Max.     | Maximum torque on the clutch shaft |
|---------------------|---------------|----------|------------------------------------|
| ViscoTwin 130 HP 3A | 100 rpm       | 3000 rpm | 400 Nm                             |

#### 4.3 Mounting

Mounting of the pump in the case of the screw pump is done via the holes in the base plate and the holes in the case foot respectively.

Provide for a solid and level ground, such as:

- **A sufficiently dimensioned, level concrete slab,**
- **a level and warp resistant steel structure.**

The foundation has to sustain the dead weight and all operating forces and guarantee pump unit stability.

The size of the holes on the casing or base plate predetermine the diameters of the screws or dowel anchors.



- **Normally, mounting is done by screwed connection (hexagon head screws, dowel anchors). In this context, observe the following screw diameters and max. torquing values:**

| Screw diameter | Max. tightening torque |
|----------------|------------------------|
| M10            | 44 Nm                  |
| M12            | 90 Nm                  |
| M16            | 220 Nm                 |

(The values apply for hexagon head bolts to DIN 931-B or EN 24014 of strength category 8.8)

The pump units need to be tightly mounted to the base plate mounting points when the pump unit is put up on 4 – 6 calottes. With this job done, the pump unit needs to be horizontally aligned by adjusting the calotte feet so that the pump stands safely and firmly on the ground.

For the base frame installation of pumps meeting the requirements of 3-A Sanitary Standards (Standard 02-11) leveling feet also meeting the requirements of 3-A Sanitary Standards (Standard 88-00) have to be used.

For pumps meeting the requirements of 3-A Sanitary Standards (Standard 02-11) a clearance of at least 100 mm between aggregate console and the floor has to be observed.

Mobile pump units have to be locked via their fixing wheels prior to commissioning.

## Chapter 4

### 4.3.1 Tightening torques for specified components

Tightening torques has been specified for certain components as shown in appendix.

### 4.4 Pipe lines

Correct dimensioning of the pressure-side pipe line is crucial to avoid unnecessary pressure build up when delivering viscous media. Therefore, orient yourself at least by the dimensions of the pump flanges. The pressure stated in the data sheet must not be exceeded. Mind the delivery pressure stated in the data sheet with respect to the pipe line pressure resistivity. Purge the piping system and the feeding devices and clean them from foreign objects.

Seal pipe connections for quench exclusively with a sealing tape. Do not use liquid seals. Liquid seal can clog the inner flushing lines.

#### **ATTENTION**

**Possible damage to property**

- **Do not use liquid seals.**
- **Liquid seal can clog the inner flushing lines.**

#### 4.4.1 Connection of the pipe lines

1. Clean and purge the pipes.
2. Flange the pump to the pipe line via elastic seals so that a tight connection develops and no undue forces act on the pumps.
3. Provide shut-off devices for removing the pump and maintenance and fitting pieces in the pressure and suction lines.
4. Provide safety valve or pressure monitoring right into the pipe line behind the pump.


## Chapter 4

### ATTENTION

#### Possible damage to property

- Do not support pipe lines on the pump! Mount pipe lines as force- and torque-free as possible.
- Allow for the permissible forces and torques on the ports (see table below) when connecting the pipe lines.
- Do not stress threaded connections with torques causing pipe clamping or declamping in the pump casing.

#### 4.4.2 Permissible forces and torques on the pump flanges

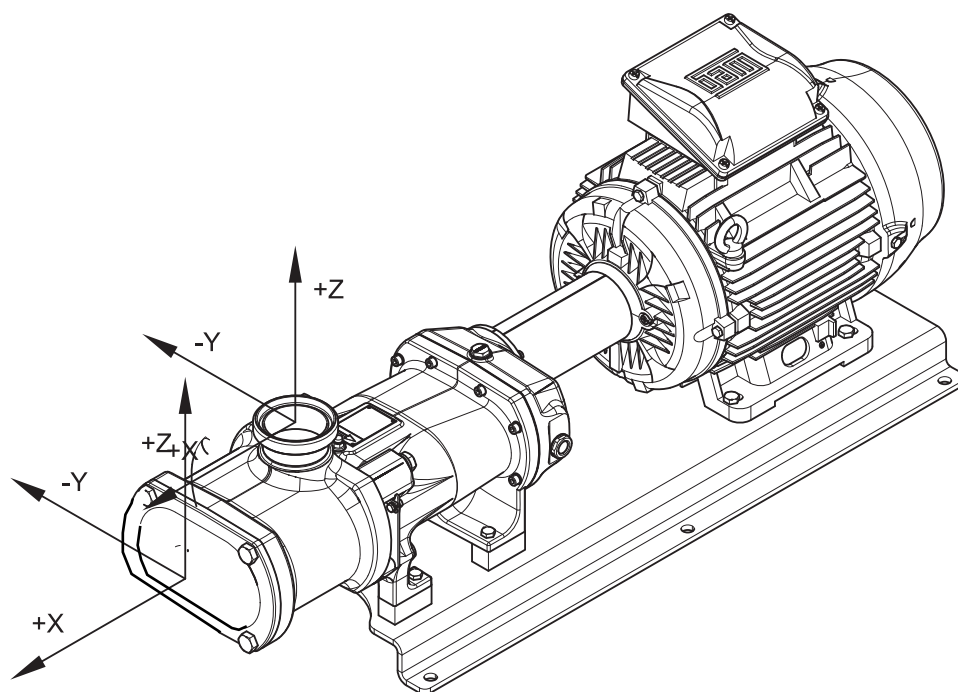

$$F_{ges} = \sqrt{Fx^2 + Fy^2 + Fz^2} \quad \text{and} \quad M_{ges} = \sqrt{Mx^2 + My^2 + Mz^2}$$

| Nominal width | F (x,y,z) [N] | F (tot) [N] | M (x,y,z) [Nm] | M (tot) [Nm] |
|---------------|---------------|-------------|----------------|--------------|
| 65            | 700           | 1000        | 310            | 450          |
| 100           | 840           | 1200        | 380            | 550          |
| 150           | 1190          | 1700        | 560            | 800          |
| 200           | 1540          | 2200        | 730            | 1050         |

#### 4.5 Permissible pressure in the pump casing

The permissible internal compressive stress is specified in the datasheet.

## Chapter 4

### 4.6 Operation and maintenance space requirements



- Allow for free space around the pump (→ dimensional drawing to provide for maintenance work without removing the pump. To simplify installation, use fitting pieces and shut-off devices).
- In addition, plan free space for sufficient drive motor ventilation (→ drive documentation).

### 4.7 Electric connection




#### **Danger!**

**Danger to life through electric shock!**  
**Potential consequences: Severe or fatal injuries.**

- **Electrical connection by qualified personnel only.**
- **Disconnect system from mains and prevent unintentional restart/reclosing.**
- Check the data on the motor type plate against mains voltage and frequency before connecting the motor.
- When connecting the motor, it is an imperative to heed the drive manufacturer's instructions and the applicable regulations for electrical equipment (e.g. motor protection, main switch).
- Check the phase sequence for the direction of motor rotation prior to making the connection.
- Screw pump are preferably operated on frequency converters or on soft-start control units.

Three-phase current squirrel-cage motor

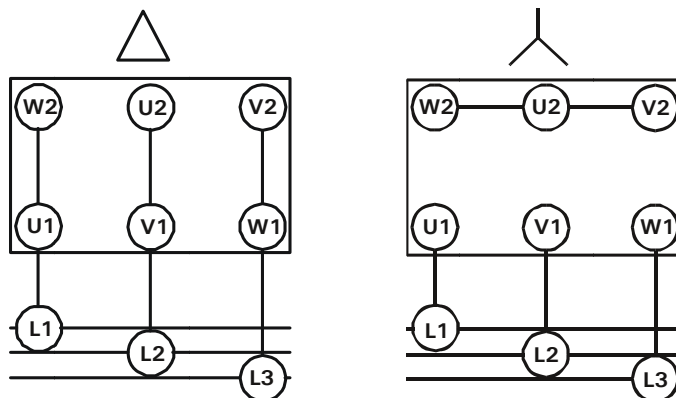

Low  
voltage stated on the type plate.

high

- Provide emergency stop facilities to shut down the pump in the event of dangerous situations.

# Manual ViscoTwin 130 HP 3A

## Chapter 4

### 4.8 Driving elements

|  |                                                                                                                                               |
|--|-----------------------------------------------------------------------------------------------------------------------------------------------|
|  | <b>Warning!</b>                                                                                                                               |
|  | <p>Driving elements are quickly moving during operation.<br/>They can squash hands.<br/>Potential consequences: Severe or fatal injuries.</p> |


- Always cover driving elements with a protective guard.

#### 4.8.1 Coupling elements

ViscoTwin screw pump with free shaft (cylinder shaft with shaft key) are connected to the drive through a flexible coupling.

|                  |                                    |
|------------------|------------------------------------|
| <b>ATTENTION</b> | <b>Possible damage to property</b> |
|------------------|------------------------------------|

- Do not mount using a hammer
- Use a pull-on device or heat the coupling half to approx. 90 °C.  
(Remove rubber parts before) and mount the coupling in hot condition.

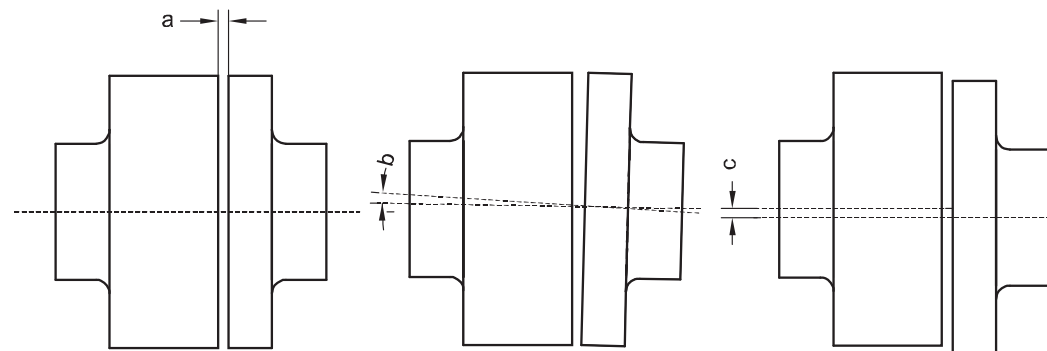

|  |                                                                                                             |
|--|-------------------------------------------------------------------------------------------------------------|
|  | <ul style="list-style-type: none"> <li>• The coupling halves must be aligned against each other.</li> </ul> |
|--|-------------------------------------------------------------------------------------------------------------|

- When assembling the drive with the pump, it is necessary to adjust  
a = Maximum and minimum clearance  
b = Angular offset and  
c = Axial offset  
acc. to the coupling manufacturer's specifications. (Enclosures)

#### 4.9 Mounting and adjusting additional equipment accessories

Mount additional equipment accessories (speed measuring devices, counter-pressure systems) according to the attached instructions (see Appendix).

## Chapter 4

### 4.10 Shaft seals

It is of the essence that there is a lubricating and cooling film between the seal faces. Depending on application, there are various methods of ensuring that the appropriate medium is being fed to the seal so that this film can be developed. Different types of rotating mechanical seals can be installed into the screw pump. The built-in version is stated on the data sheet.

#### 4.10.1 Single acting mechanical seal

The seal is being lubricated through the medium.

#### 4.10.2 Single acting mechanical seal with Quench

In this version rotary shaft lip type seals provide a quench chamber at the mechanical seal. The quench fluid is being supplied to the seal via a quench reservoir, and the quench fluid is circulated back into the reservoir via a return pipe.

#### 4.10.3 Double-acting mechanical seal with quench and thermo siphon rotation

In this version, the quench fluid is being supplied to the seal via a quench reservoir, and the quench fluid is circulated back into the reservoir via a return pipe.

The quench medium circulates between seal and quench vessel due to the elevated temperature on the rotating mechanical seal faces during pump operation.

Make sure before starting the pump that the quench medium can circulate from the seal to the vessel and back. Carefully bleed the system.

For this purpose, attach the quench vessel approx. 1-2 m above the pump and the seal and vessel should be connected through tubes preferably made from stainless steel. Other tubes or even hoses can also be used temperature and medium permitting. The lines towards the seal inlet must be fastened in continuously falling way and the lines from the seal outlet back to the vessel must be fastened in a continuously rising way. (See Fig. 4a)

### **ATTENTION**

#### **Possible damage to property**

- **The quench medium should not exceed a temperature of 70 °C.**
- **No bubbles should form since otherwise circulation would no longer be ensured.**
- **In case that quench fluid temperature has to be cooled, the vessel can be equipped with a condensing coil through which cold water flows.**

#### 4.10.4 Double-acting mechanical seal with flow

The seal is flown through by a quench medium in this version. This medium is supplied from an external source (pressure pipe system, pump, connected 'water line', etc.).

Please ensure that the quench supply has been connected to the seal and quench fluid is flowing through the seal before the pump is started. This is necessary to ensure that the sliding surfaces on the outside are being cooled. Carefully bleed the system.

Both pressure and flow through the seal can be adjusted using a flow meter and two control valves. This flow should be adapted to the heat generation on the seal depending on pressure, speed and media temperature.

Adjust the flow such that the quench fluid outlet temperature does not exceed 40-45 °C. The flow velocity should not drop below 1 l/min.

## Chapter 4

### 4.10 Quench media

The manufacturer uses only quench fluids suitable for food products (e.g. distilled water). Some usable quench media are being shown below. Change these quench media at regular intervals. Do not use aggressive quench fluids.

#### Glycerine/water mix

This mixture is used in different concentrations. Glycerine does not boil until 290 °C and decomposes in the process. The water vaporises in continuous operation and has to be regularly refilled particularly at higher temperatures of up to 150°C. Suitable for foodstuffs.

#### Glycol/water mix

This is also used in various concentrations. Glycol does not boil until 190°C. The water vaporises in continuous operation and has to be regularly refilled particularly at higher temperatures of up to 150°C. Suitable for foodstuffs.

#### Distilled water

Distilled water is a poor lubricant but cools very well. The water boils at 90-100 °C. The water vaporises in continuous operation and has to be regularly refilled particularly at higher temperatures of up to 80°C. Suitable for foodstuffs.

The following rules have to be kept when using water as a quench fluid:

**Solid particles max. 10 mg/l**

**Particle size max. 50 µm**

**Permanganate value max. 30 (humus-free)**

**Iron content max. 1 mg/l**


**Water hardness max. 10 ° of German hardness (dH)**

**Critical particle size 2-5 µm**

**Do not use any de-ionized water**

Critical particles of the above-mentioned size of 2 – 5 µm can accumulate between the sliding surfaces resulting in increased wear.

### 4.11 Quench connections

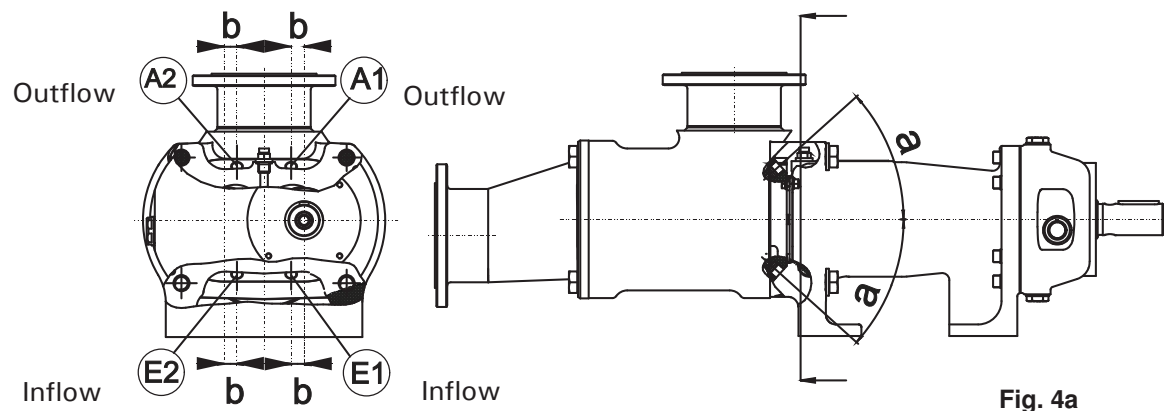

| Pump type | a   | b       | A1    | A2    | E1    | E2    |
|-----------|-----|---------|-------|-------|-------|-------|
| 104       | 37° | 12,5 mm | G1/4" | G1/4" | G1/4" | G1/4" |
| 130       | 42° | 14,4 mm | G1/4" | G1/4" | G1/4" | G1/4" |

## Chapter 5

### 5. Commissioning

#### 5.1 Preparing commissioning

|                                                                                   |                                                                                                                                                                                     |
|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <b>Warning!</b><br><b>Risk of injuries through rotating machine parts or from liquids escaping under high pressure.</b><br><b>Potential consequences: Severe or fatal injuries.</b> |
|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

- **Do not perform any work with the pump running!**
- **Only let qualified personnel perform commissioning.**

##### 5.1.1 Pump

Clean the pump prior to initial commissioning.

##### 5.1.2 Sealing system

1. Check the shaft seal (version → data sheet).
2. Oil level in the pump gearbox checked?
3. Auxiliary systems (quench supply of the seals) connected?

|                  |                                    |
|------------------|------------------------------------|
| <b>ATTENTION</b> | <b>Possible damage to property</b> |
|------------------|------------------------------------|

- **Pressurise double-acting mechanical seals using the counter-pressure system.**
- **Operation without quench medium can destroy the seal.**

##### 5.1.3 Pumps for handling foodstuffs

Deploying ViscoTwin pumps for handling foodstuffs make sure that they are clean before commissioning and each production cycle. Cleaning can be carried out as follows:

- **Basically by disassembling the pump and manual cleaning of the component parts using the detergents required for that purpose (hand cleaning).**
- **By the so-called C.I.P. - Cleaning (Cleaning in Place) or S.I.P. (Sterilisation in Place), flushing using appropriate cleaning agents, provided the cleaning method is permissible for this medium.**

A CIP of the pump should be executed at the following times:

- **When the pump is first commissioned for use**
- **When any spare components are fitted into the wetted area of the Pumpenfabrik Wangen**
- **After operations, i.e. before a fairly long idleness of the pump**
- **After long idleness, before re-operation**

With the CIP cleaning process completed, subsequent to initial commissioning, first cleaning cycles, corresponding periods, and any modifications on the system, cleaning process or detergent, the cleaning efficiency has to be inspected (i.e. whether the pump is really clean) by disassembling the pump.

The operator is responsible for securing the cleaning success. The manufacturer cannot assume any warranty for the cleaning success and does not accept any liability for consequential damage.

## Chapter 5

### 5.1.4 Pumps in a processing system by 3A Standard (02-11)

Pumps to be used in a processing system not designed so that the system automatically is shut down if the product pressure in the system becomes less than of the atmosphere and cannot be started until the system is resterilized shall have a steam or other sterilizing medium chamber surrounding (1) the shaft, (2) the portion of the inlet and outlet connection adjacent to the product, and (3) the pump cover.

#### C.I.P. – process

Are suitable for the materials of the pump:

Surfactant-containing solutions (usually NaOH and HNO<sub>3</sub>) with temperatures between 60 and 95 °C and concentrations of 0.5% up to 3%.

Acidic solutions with a pH value of less than 3 must not be used.

#### S.I.P – process

Are suitable for the materials of the pump:

Sterilization at 125 - 135 °C over a period of 10 to 30 minutes with saturated steam (2.2 – 3.0 bar).

|                                                                                    |                                                                                                                                                                                               |
|------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p><b>Warning!</b></p> <p><b>Risk of injuries through rotating machine parts or from liquids escaping under pressure.</b></p> <p><b>Potential consequences: Severe or fatal injuries.</b></p> |
|------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

- **Do not perform any work with the pump running!**
- **Disconnect the pump from mains and secure against inadvertent start up. (U-lock)**
- **Use safety gloves and goggles when using aggressive detergents.**

1. Connect pump to CIP cleaning system or switch system.
2. Start cleaning system.
3. Cleaning pipe line system and pump.
4. Shut cleaning system, remove CIP medium completely.

|                                                                                     |                                                                                                                                                                                                                                                                                                                                                                                                                         |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <ul style="list-style-type: none"><li>• <b>C.I.P. cleaning must conform to the hygiene of foodstuffs regulations as amended from time to time. The specifics pertaining to material stability must be strictly observed.</b></li><li>• <b>In case you have developed own C.I.P. cleaning methods for your pumping media, ensure pump suitability for the selected method by consulting the pump supplier.</b></li></ul> |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

|                  |                                    |
|------------------|------------------------------------|
| <b>ATTENTION</b> | <b>Possible damage to property</b> |
|------------------|------------------------------------|

- **Avoid abrupt changes in temperature during the cleaning process. With the pump in stationary state, fill in hot medium and wait until the pump has warmed up.**

## Chapter 5

### 5.2 Switching on

Check before switching on:

- Pump with drive safely installed and connected?
  - Connections sealing and connected stress-free?
  - Oil level checked?
  - Quench fluid level OK? Correct pressure set in case of a counter-pressure device?
  - Rotational direction checked?
  - Safety devices (covers and limit switches, safety valve) installed and checked for function?
1. Before start up, check pump for contamination and foreign objects.
  2. Fully open pressure and suction-side valves.
  3. Fill pump with medium to enable suction safely.
  4. Switch on drive.
  5. When initially operating the pump, check to see whether it and the pipe lines are tight.

### 5.3 Operation

|                                                                                    |                                                                                                                                                                                                                |
|------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p><b>Warning!</b></p> <p>Do not operate against closed shut-off devices.<br/>Bursting of the pipe line or downstream system components is possible.<br/>Potential consequences: Severe or fatal injuries.</p> |
|------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

- Secure the pump through an approved overpressure protection.

|                         |                                    |
|-------------------------|------------------------------------|
| <p><b>ATTENTION</b></p> | <p>Possible damage to property</p> |
|-------------------------|------------------------------------|

- The pump needs to be cleaned for handling foodstuffs (→ Commissioning pumps for handling foodstuffs)

## Chapter 6

### 6. Placing out of operation

|                                                                                   |                                                                                                                              |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------|
|  | <b>Warning!</b>                                                                                                              |
|                                                                                   | <b>Rotating machine parts or liquids escaping under high pressure.<br/>Potential consequences: Severe or fatal injuries.</b> |

#### 6.1 Shutting off

1. Stop the pump by shutting down and switching off the drive unit.
2. Shut the pressure and suction-side valves.

|                                                                                   |                                                                                      |
|-----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
|  | <b>Caution!</b>                                                                      |
|                                                                                   | <b>Risk of injuries through hot machine parts<br/>Potential consequences: Burns.</b> |

#### 6.2 Drainage

Drain the pump after shutdown and clean it, particularly when:

- it is a pump for foodstuffs,
- the pump was deployed outdoors and the medium can freeze up due to atmospheric influences,
- the pumping medium tends to settle / cool or hardens through chemical reaction.

#### 6.3 Decommissioning

Please observe following measures when decommissioning the unit or shutting it down for a longer period:

- Clean the pump thoroughly.
- Open the cover so that residual water can run out.

#### 6.4 Final decommissioning of the pump

1. Disconnect the electrical power (electrical engineering professionals).
2. Close the inlet and outlet lines. Remove pipelines. Drain the pump.
3. Complete emptying and cleaning of the pump. (Professional and material disposal of the residues see also chapter 3)

## Manual ViscoTwin 130 HP 3A

### 7. Maintenance and servicing

|                                                                                   |                                                                                                                              |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------|
|  | Warning!                                                                                                                     |
|                                                                                   | <p><b>Risk of injuries through rotating machine parts.</b><br/> <b>Potential consequences: severe or fatal injuries.</b></p> |

**Do not perform any work while the pump is running!**

**Drain pump and connected pipe lines and check the surface temperature before opening.**

#### 7.1 Maintenance tasks and schedule

| Period                                                 | Part, position                      | Who                     | Tasks and Actions                                                                                                                                                                                                                                             |
|--------------------------------------------------------|-------------------------------------|-------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 50 hours after initial start-up or general maintenance | All external screws and bolts       | Maintenance             | Check for correct tightening torque values according to tightening torque schedule in appendix of this manual.                                                                                                                                                |
| Continuously (at least daily)                          | Bearing housing                     | Operator<br>Maintenance | Check oil level (see chapter 7.4.1): <ul style="list-style-type: none"> <li>• If necessary, top up/change oil, see chapter 7.4.2</li> </ul>                                                                                                                   |
| Weekly                                                 | Pump housing                        | Operator<br>Maintenance | Sanitary Inspection, see chapter 7.2                                                                                                                                                                                                                          |
|                                                        | Mechanical seals (position 1303)    | Operator<br>Maintenance | Check against leakage: <ul style="list-style-type: none"> <li>• In case of stronger leakage replace seal faces (position 2327) and elastomers (position 2261)</li> </ul>                                                                                      |
|                                                        | Shaft sealing rings (position 1111) | Operator<br>Maintenance | Check for leakage (e.g. oil on floor or on pump head below position 1111): <ul style="list-style-type: none"> <li>• In case of leakage, replace shaft sealing ring position 1111 (see chapter 9). Coordinate further actions with Processtec, Inc.</li> </ul> |
|                                                        | Spindle screws (position 2180)      | Maintenance             | Check spindle screws and O-rings: <ul style="list-style-type: none"> <li>• If contaminated or medium is leaking → see chapter 7.2</li> </ul>                                                                                                                  |
|                                                        | External bolt connections           | Operator                | Check tightening torques on conformity with tightening torque schedule in appendix of this manual. <ul style="list-style-type: none"> <li>• If required, tighten bolts according to tightening torque values in appendix</li> </ul>                           |
| 250 hours after initial start-up                       | Bearing housing                     | Maintenance             | Replace oil and clean magnets on position 1541 (see chapter 7.4.3)                                                                                                                                                                                            |
| After 100 hours of operation or at least semi-annually | Pump housing                        | Maintenance             | Check tightening torque of the spindle screws position 2180 (see chapter 9 and appendix for torque values to apply) <ul style="list-style-type: none"> <li>• If required, tighten bolts according to tightening torque values in appendix</li> </ul>          |

## Manual ViscoTwin 130 HP 3A

| Period                                                                    | Part, position                    | Who                                                     | Tasks and Actions                                                                                                                                                                            |
|---------------------------------------------------------------------------|-----------------------------------|---------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| As long as PeakValue is 0: every month                                    | Bearing housing                   | Maintenance                                             | Check, record and report PeakValue <ul style="list-style-type: none"> <li>Follow instructions as per Table 7-3 in chapter 7.5</li> </ul>                                                     |
| If PeakValue is 10:                                                       | Bearing housing                   | Maintenance                                             | Prepare for bearing housing exchange, notify Processtec for upcoming bearing exchange. <ul style="list-style-type: none"> <li>Follow instructions as per Table 7-3 in chapter 7.5</li> </ul> |
| After 500 cleaning cycles or thermal cycles, after one year at the latest | Pump housing and mechanical seals | Maintenance                                             | Renew all O-rings (see chapter 9)                                                                                                                                                            |
| In continuous operation after 3000 operating hours or 1 year              | Gear housing                      | Maintenance                                             | Change gear oil (see chapter 7.4.3)                                                                                                                                                          |
| After 6'000 operating hours                                               | Bearing housing                   | Processtec Company certified and entitled by Processtec | Replacement of bearings and gear wheels.                                                                                                                                                     |
| Annually, if acid sanitizer is used                                       | Shaft seal rings position 1111    | Maintenance                                             | Replace shaft seal rings position 1111                                                                                                                                                       |
| In Ex-Area: check contact resistance of grounding                         | Complete pump unit                | Qualified electrician                                   | Check contact resistance of pump parts to electrical ground. Resistance must be less than $10^9$ Ohm.                                                                                        |

**Table 7-1: Overview and schedule of maintenance tasks**

### 7.2 Sanitary inspection of pumps for food processing

Instructions provided in chapter 7.1 apply exceedingly to sanitary pumps for food processing.

Spindle screws (2180) are to be checked every 100 operating hours. If contamination (underneath the O-ring) is detected, all parts in this sector which are in direct contact with the medium (spindle, spindle screw with O-ring) must be dismantled and thoroughly cleaned in an alcoholic bath. Clean and disinfect the shafts and all inner parts of the pump housing carefully with alcohol solution and a clean cloth. Renew the O-ring of the spindle screw position 2194 and the O-ring position 130 of the Inboard Rotor Holder position 80 inside the mechanical seal.

Subsequently, no corrosion or seizure marks must be visible; otherwise the affected parts must be replaced.

If contamination on the mechanical seal outside the medium is detected after 500 cleaning cycles or one year at the latest, all component parts of the mechanical seal are to be thoroughly cleaned and disinfected in an alcohol bath. Replace all O-rings of the inboard rotor holder (O-ring 90, 130, 140 and 220) (see explosion drawings in appendix).

Subsequently, no corrosion or seizure marks must be visible; otherwise the affected parts must be replaced.

### 7.3 Special replacements in case of use of acid sanitizer

If acid sanitizer for surface cleaning is used, we recommend replacing shaft sealing rings (position 1111) every 12 months.

## Manual ViscoTwin 130 HP 3A

### 7.4 Lubrication

Sufficient lubrication of all bearings is required in order to achieve the designed bearing life span. Shorter oil exchange intervals are required under the following operating conditions:

- large temperature variations
- large pressure variations

#### 7.4.1 Checking oil level

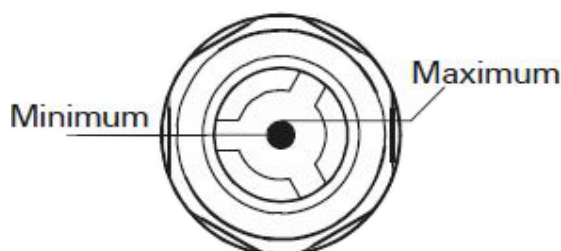


Figure 7-1: Oil level indicator (position 1541)

- Oil level has to be checked at least once a week as per Table 7-1
1. Shut down the pump and wait for 3 minutes until oil has settled. Then check oil level. Max and minimum oil filling levels are illustrated in Figure 1
  2. Top up gear oil if necessary.
  3. Visual inspection of oil quality by color:
    - ⇒ dark and nearly opaque oil must be replaced
    - ⇒ locking screws (position 2233a and 2233b) have a magnetic core. Inspect thread and gasket, and clean the magnet from debris.

#### 7.4.2 Topping up gear oil

1. Shut down pump.
2. Open locking screw at position 2233b on upper side of the gear housing.
3. Clean locking screw thoroughly.
4. Re-fill gear oil up to max mark of oil level indicator as illustrated by Figure 1
5. Mount locking screw 2233b again.

#### 7.4.3 Changing gear oil

1. Shut down the pump.
2. Put a vessel under lower locking screw at position 2233a.
3. Open lower locking screw at position 2233a.
4. Open upper locking screw 2233b and drain gear oil into vessel.
5. Clean both locking screws thoroughly from debris.
6. Mount both locking screws top and bottom (position 2233b and 2233a).
7. Top up gear oil as described in chapter 7.4.2.
8. Mount locking screw (position 2233a).

## Manual ViscoTwin 130 HP 3A

### ATTENTION

Possible damage to property

Only use gear oil approved for the food industry. Use correct type of gear oil. (See list of lubricants)

#### 7.4.4 Lubricating agents

The following gear oil suitable for food products to the FDA guideline NSF-H1 and viscosity of ISO VG 220 is recommended for ViscoTwin applications in food processing.

|         |               |
|---------|---------------|
| Product | Gear oil      |
| Castrol | Optileb Hy 68 |

Other gear oils of other producers and makes that correspond to the same specification can be alternatively used. (e.g.)

|         |                  |
|---------|------------------|
| Product | Gear oil         |
| AVIA    | AVIAFOOD GEAR 68 |
| Mobil   | Mobil DTE FM 68  |

Please see helpful sourcing information for US market in appendix.

#### 7.4.5 Lubricating filling quantity

Filling quantity required is 1 L.

### 7.5 Bearing housing surveillance

Systematic monitoring for bearing vibrations in the bearing housing is required to ensure that the bearings are replaced before they fail. The preferred method is described below. In mutual agreement with Processtec, Inc., alternative methods may be applied.

#### 7.5.1 Method for bearing monitoring

##### Measuring equipment

2140 Machinery Health Analyzer or CSI 2600 Machinery Health Expert from Emerson Electric Co., St. Louis MO, USA

##### Designation and description of technology applied

The PeakValue Technology from Emerson Electric Co. divides whole range of vibration into 6 different so called Fault Stages as listed in table 7-2

| Fault Stage | Impacting [g's]<br>Peak Value | Early warning with severity |
|-------------|-------------------------------|-----------------------------|
| 0           | 0                             | Good machine                |
| 1           | 10                            | Alert - notify maintenance. |
| 2           | 20                            | Problem getting serious     |
| 3           | 30                            | Near end of life            |
| 4           | 40                            | Failure imminent            |
|             | 50                            | Failure occurs              |

Table 7-2: The 6 fault stages of PeakValue method of Emerson (source: Emerson Electric Co.)

## Manual ViscoTwin 130 HP 3A

### Method description

With vibration deviations from the gauged PeakValue 0, the validation is established. According to the schedule listed in table 7-1 and table 7-3, bearing surveillance actions have to be performed.

| Period, interval                    | Task                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|-------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| As long as PeakValue is 0 → monthly | <p>Measure and record PeakValue:</p> <ul style="list-style-type: none"> <li>• If PeakValue is 0 → next PeakValue measurement shall take place after 1 month</li> <li>• If PeakValue is 10 <ul style="list-style-type: none"> <li>o Weekly Peak Value measurement</li> <li>o prepare for bearing housing exchange</li> <li>o report to Processtec for planning of bearings exchange</li> </ul> </li> <li>• If PeakValue is 20, immediate bearing housing exchange</li> <li>• If PeakValue is 30, immediate pump shut down and bearing housing exchange</li> </ul> |
| As long as PeakValue is 10 → weekly | <p>Measure and record PeakValue:</p> <ul style="list-style-type: none"> <li>• If PeakValue is 10 <ul style="list-style-type: none"> <li>o Weekly Peak Value measurement</li> <li>o prepare for bearing housing exchange</li> <li>o report to Processtec for planning of bearings exchange</li> </ul> </li> <li>• If PeakValue is 20, immediate bearing housing exchange</li> <li>• If PeakValue is 30, immediate pump shut down and bearing housing exchange</li> </ul>                                                                                          |

Table 7-3: Vibration monitoring schedule ViscoTwin 130 High Pressure 3A

## 7.6 Maintenance of shaft seal

Check the quench fluid filling level regularly and at least once a week. Top up the quench fluid as required or change the fluid at regular intervals. The filling level can also be monitored using a level indicator.

Persisting leakage (medium seeps out from the lower opening in the bearing housing) indicates wear of the slip rings or damage to the elastomer rings.

Mechanical seals being operated under counter-pressure need also to be checked for this counter-pressure or monitored via corresponding monitoring equipment (level switches).

## 7.7 Disassembling the pump

|                                                                                   |                                                                                                 |
|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------|
|  | <b>Warning!</b>                                                                                 |
|                                                                                   | <b>Risk of injuries through rotating machine parts or from liquids escaping under pressure.</b> |
|                                                                                   | <b>Potential consequences: Severe or fatal injuries.</b>                                        |

- **Do not perform any work with the pump running!**
  - **Disconnect system from mains and prevent unintentional restart/reclosing.**
  - **Only qualified personnel may carry out work on the electric system.**
  - **Only let qualified personnel carry out pump disassembly.**
1. Shut down the pump.
  2. Shut the suction and pressure-side valves.
  3. Let the pump cool.
  4. Drain the pump; collect the flowing out pumping medium and dispose of it.
  5. Disconnect the pump from electrical energy.
  6. Remove connections of auxiliary systems (sealing systems, temperature sensors, etc.).
  7. Remove the pump from the system.

## 7.9 Shipping the pump for repair

|                                                                                     |                                                                                           |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------|
|  | • <b>Repair work is only carried out with the declaration of decontamination at hand.</b> |
|                                                                                     |                                                                                           |

1. Drain and clean the pump.
2. Seal all openings and holes.
3. Ship the pump to the manufacturer along with completely filled in declaration of decontamination
4. Attach information about reasons of repair and operating conditions.

## Chapter 8

### 8. Disturbances and their elimination

Disturbances on pumps and pump units can basically be of hydrodynamic, mechanical or electrical nature.

#### 8.1 Mechanical and hydrodynamic disturbances checklist

| Type of disturbance                                  | possible cause                                                            | Elimination                                                                               |
|------------------------------------------------------|---------------------------------------------------------------------------|-------------------------------------------------------------------------------------------|
| Pump does not start                                  | Jam by foreign objects                                                    | Remove foreign objects                                                                    |
|                                                      | Deposits at shutdown                                                      | Immediately clean pump                                                                    |
|                                                      | Medium hardens (due to temperature/chemical action)                       |                                                                                           |
|                                                      | Solids content too high                                                   | Check pump delivery conditions, change project planning if necessary                      |
|                                                      | System pressure too high                                                  | Compare pump pressure rating with system conditions, change project planning if necessary |
| Delivery rate decreases or is not reached any longer | Shut-off devices partly shut, pipe line clogged                           | Open shut-off devices fully, eliminate clogging                                           |
|                                                      | Screw spindles worn                                                       | replace                                                                                   |
|                                                      | Trapped air in medium                                                     | Check suction line, medium supply and seals                                               |
|                                                      | Seals defective                                                           | Replace seals                                                                             |
| Pump does not suck                                   | wrong direction of rotation                                               | Correct direction of rotation, observe directional arrow                                  |
|                                                      | Spindles mounted incorrectly                                              | mount spindles correctly                                                                  |
|                                                      | Suction line clogged                                                      | clean                                                                                     |
|                                                      | Pump or filter clogged                                                    | Clean pump / filter                                                                       |
|                                                      | Suction line draws air.                                                   | Seal line / Increase filling level when sucking from tank                                 |
| Loud pump noise                                      | Cavitation, rotational speed too high or suction pipe too narrow, clogged | Check project planning, chose lower speed if necessary, increase pipe line cross-section  |

#### 8.2 Electric disturbances

Disturbances in the electric drive of the pumps or the pump unit can have numerous causes (power supply, dimensioning of the drive, motor protection, etc.).

Eliminate disturbances in connection with the electric drive following the attached drive manufacturer's operating and maintenance manual.

## Chapter 9

### 9. Disassembly and assembly

|                                                                                   |                                                                                                                                                                       |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <b>Warning!</b>                                                                                                                                                       |
|                                                                                   | <b>Risk of injuries through rotating machine parts or from liquids escaping under pressure or hot surfaces.<br/>Potential consequences: Severe or fatal injuries.</b> |

- Do not perform any work with the pump running!
- Don not operate pump without lantern protection!
- Disconnect system from mains and prevent unintentional restart/reclosing.
- Drain the pump and connected pipe lines and check the surface temperature before opening.
- Let the pump cool.

|                                                                                   |                                                                                                                               |
|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------|
|  | <b>Warning!</b>                                                                                                               |
|                                                                                   | <b>Risk of injuries through falling or tipping heavy machine parts.<br/>Potential consequences: Severe or fatal injuries.</b> |

The pump or parts of it may be very heavy and need to be moved using appropriate lifting gear.

#### 9.1 General notes on disassembly and assembly

|                                                                                     |                                                                                                                                                                                                                                           |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <ul style="list-style-type: none"><li>• Always replace the removed gaskets, O-rings and shaft sealing rings after disassembly.</li><li>• The numbers stated in the following figures are the F-numbers of the spare parts list.</li></ul> |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

Please see the enclosed exploded drawing incl. spare parts list for the designations used for the parts.

#### 9.2 Lantern protection

The lantern protection behind the seal housing reliably prevents reaching into the pump. It can be removed for better accessibility of the pump parts for maintenance and repair work.

The pump must not be operated without a mounted lantern protection.

## Chapter 9

### 9.3 Disassembling and installing the pump

#### 9.3.1 Driving elements

|                                                                                   |                                                                                                              |
|-----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|
|  | <b>Caution!</b>                                                                                              |
|                                                                                   | <b>Risk of jamming and crushing when disassembling the drive.<br/>Potential consequences: Minor injuries</b> |

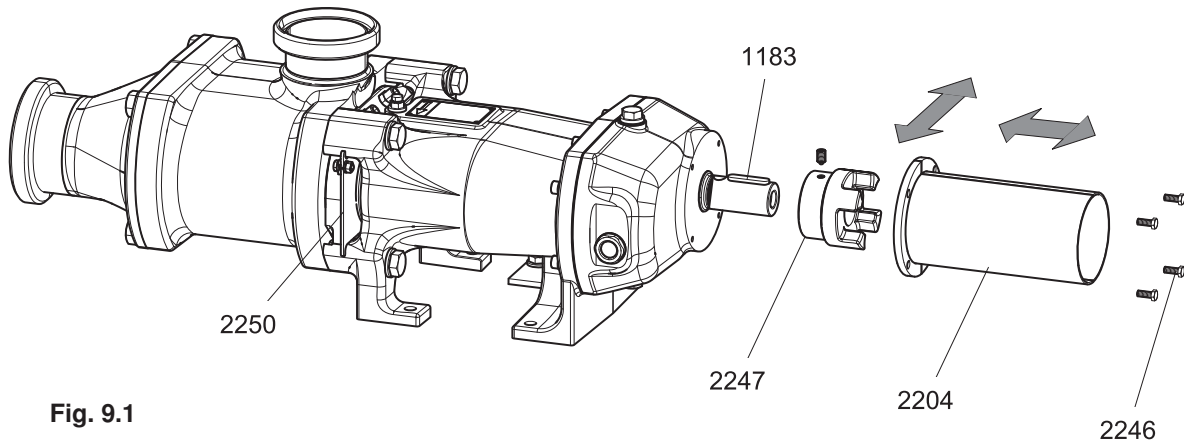


Fig. 9.1

#### Disassembly:

1. Loosen screws 2246 using a socket of size 10 mm and remove screws and coupling guard.
2. Disconnect the pump from piping system. Loosen the fastening of the pump on the base plate, carefully lift the pump and remove it from the coupling. (Lifting gear) Remove flexible coupling element and keep it.
3. Loosen the threaded pin in coupling part 2247 and pull it out from the pump shaft using a suitable puller. Lift key 1183.

#### Installation:


4. Insert key into the drive shaft. Slightly grease the drive shaft and slide the coupling onto the shaft. Screw in the threaded pin and tighten it.
5. Mount pump, align it toward the drive. (see chapter 5)
6. Insert both halves of the coupling guard, insert screws 2246 and tighten them.

|                  |                                    |
|------------------|------------------------------------|
| <b>ATTENTION</b> | <b>Possible damage to property</b> |
|------------------|------------------------------------|

- Do not mount the coupling using a hammer.
- Use a pull-on device or heat the coupling to approx. 90 °C (remove rubber parts before) and mount the coupling in hot condition.

## Chapter 9

### 9.3.2 Gear housing

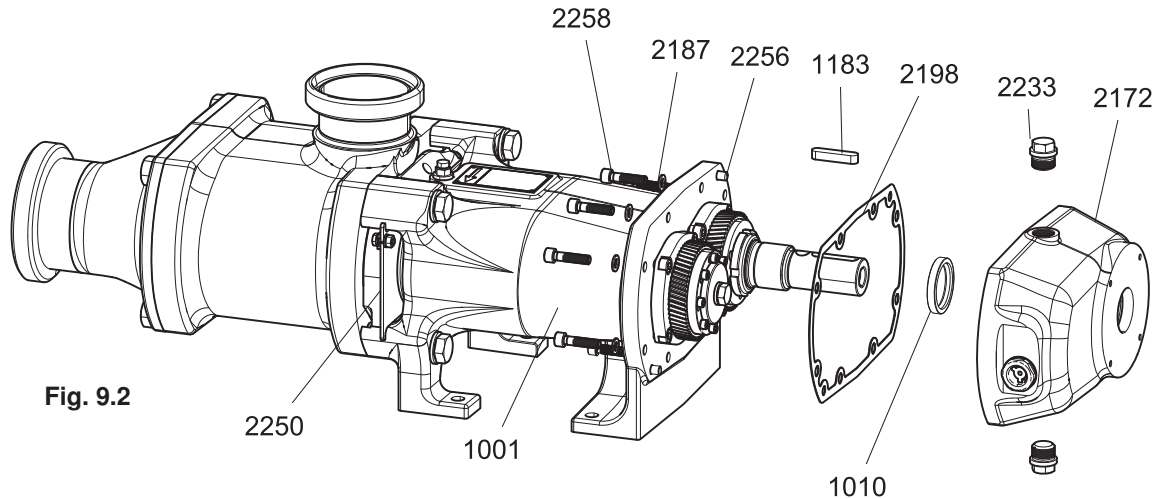

#### Disassembly:

1. Remove key 1183.
2. Open the upper locking screw 2233 and then the lower locking screw 2233 in gear housing 2172 and drain the gear oil into a sump tray.
3. Loosen the screws 2258 and remove them together with the washers 2187. Carefully pull off the gear housing. This may require slight hammer blows (plastic hammer) since the gear housing has been fitted with cylindrical pins 2256. Carefully remove gasket 2198.

#### Installation:

4. Clean the sealing surfaces between bearing housing 1001 and gear housing 2172.
5. Insert new gasket 2198.
6. Insert gear housing 2172 into the cylindrical pins 2256, insert and tighten the cylinder head screws 2258 including washers 2187. (Torque 20 Nm)
7. Screw in and tighten the lower locking screw 2233, fill in clean gear oil (see chapter 'Maintenance') and check the oil level on sight glass 1541.
8. Screw in and tighten upper locking screw 2233.

## Chapter 9

### 9.3.3 Cover

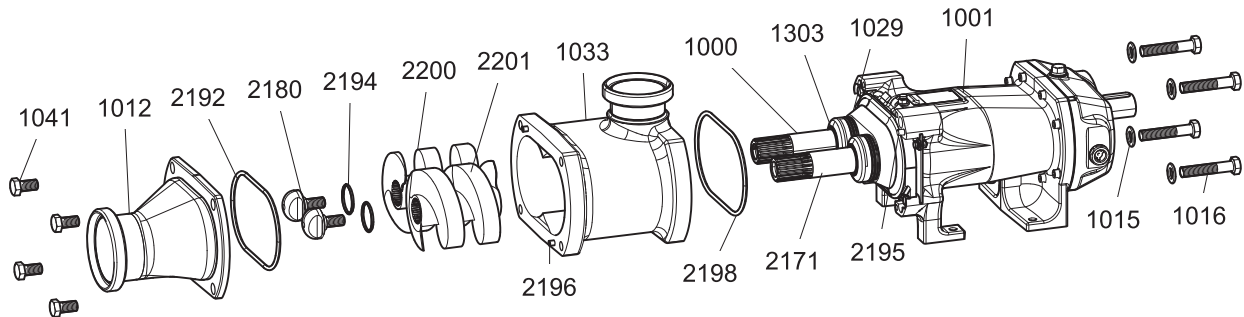


Fig. 9.3

#### Disassembly

1. Loosen and remove screws 1041.
2. Remove the cover.
3. Thoroughly clean the cover and its seal seat.



- If necessary, loosen the cover using slight blows of a hammer (plastic hammer) because it is centred by dowel pins 2196.

#### Installation:

1. Insert seal 2192 into the cover. Place the cover onto pump casing 1033 via the cylindrical pins, screw in and tighten screws 1041.

### 9.3.4 Removing and installing screw spindles



- Relieve existing counter-pressure device, drain quench fluid, unscrew and remove connections.

#### Disassembly:

1. Loosen and unscrew hexagonal screws 1016 and remove them with washers 1015. Remove pump housing.
2. Loosen and unscrew spindle screws 2180 while holding drive shaft 1000 tight via locking hole using a tool (steel mandrel), carefully remove O-rings 2104.
3. Remove screw spindles 2200 + 2201 from the shaft. (Use puller)
4. Check the screw spindles, shafts as well as the pump casing for damage and carefully clean all parts. Replace O-ring 2198 on seal housing 1029.

## Chapter 9

### Installation:

1. Carefully slide the screw spindles (imperative in pairs) onto the shafts. The left-hand spindle will then be located on the driver shaft (long shaft) and the right-hand spindle on the driven shaft. Observe correct seat of the O-rings when sliding the spindle onto the seal.
2. Insert O-ring 2194 into the greased groove of the spindle nuts.
3. Screw in spindle nuts on both shafts and slightly tighten alternating, manually at first, then using an open-end spanner. In this process, just hold shafts and spindles in place manually.



- **The seals are prestressed when slightly tightening the spindle nuts. Check to see that exterior stator 1A is slowly pushed into the seal housing against its spring.**

4. Tighten the spindle nut on the driving shaft (long shaft) while holding the shaft in place in the drive shaft with the steel mandrel inserted in the hole. Torque = 150 Nm.
5. Tighten driven shaft spindle nut using torque of 150 Nm and block the shaft by inserting a wedge made from soft material (aluminium or copper).
6. Let pump housing 1033 slide into the dowel pins via the screw spindles, insert and tighten screws 1016 with washers 1015 via the bearing housing.
7. Further pump assembly in reverse order.

### ATTENTION


#### Possible damage to property

- Carefully slide the screw spindles together onto the shafts.
- Before screwing in the spindle screws, wet both threads on the spindle screws with a thread-locking compound (factory uses Loctite 270).
- Observe the required tightening torques (Chapter 4)
- When replacing screw spindles, you will also need to synchronize them via the pinion gear drives (see Chapter 9.6)

## Chapter 9

### 9.3.5 Arranging the pump casing

There are 3 intended arrangements of the dowel pins corresponding to the three different positions of the pump casing. The arrangement of the different positions is shown in colours here.

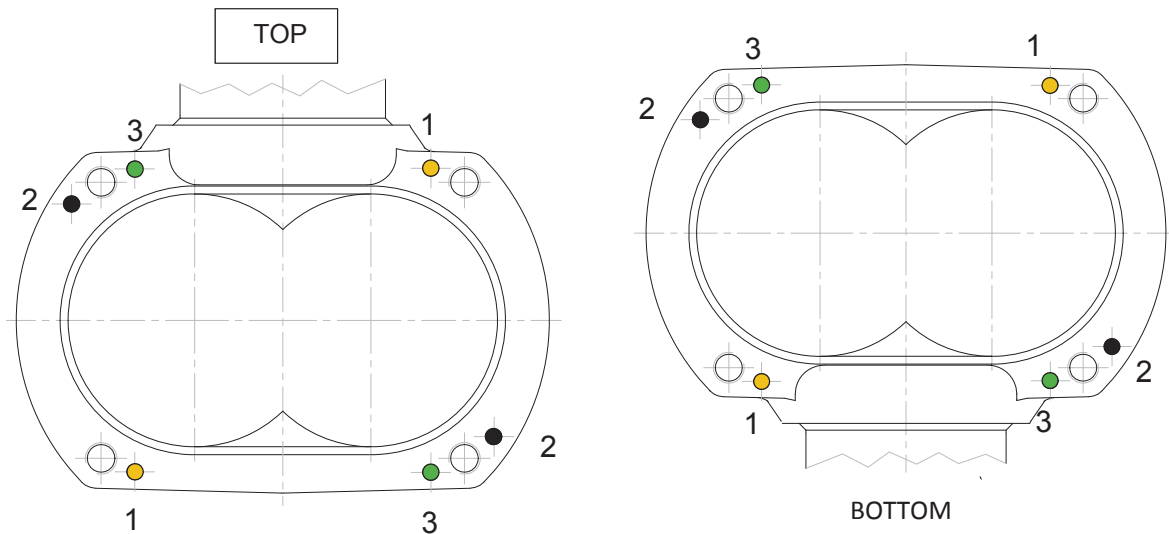

|                    |            | Pos. of housing nozzle |        |
|--------------------|------------|------------------------|--------|
|                    |            | TOP                    | BOTTOM |
| Rotating direction | LEFT       | 1                      | 3      |
|                    | LEFT/RIGHT | 2                      | 2      |
|                    | RIGHT      | 3                      | 1      |

#### ATTENTION

Possible damage to property

- Wrong combination of the dowel pin arrangement and wrong direction of load rotation results in damage to the pump casing and spindles.
- See the data sheet for correct arrangement of the dowel pins (direction of rotation, direction of flow and position of the housing nozzle).


## Chapteter 9




- The pump casing must be clean.
- Screw spindles must also be meticulously clean.
- Apply lubricant to shafts and hubs of the screw spindles (factory uses GERALYN® 2).

### 9.3.6 Arranging the spindles


Right-hand and left-hand spindles can be swapped but this will change the flow direction of the pump as well as reversal of drive rotation direction.

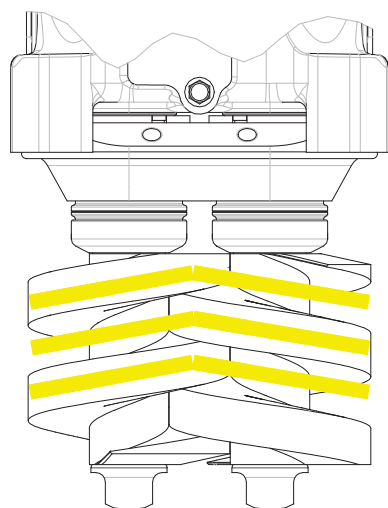

V

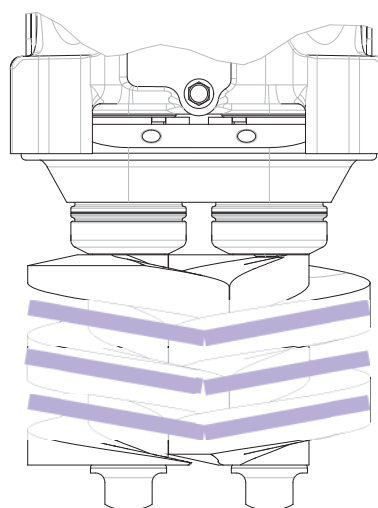

A

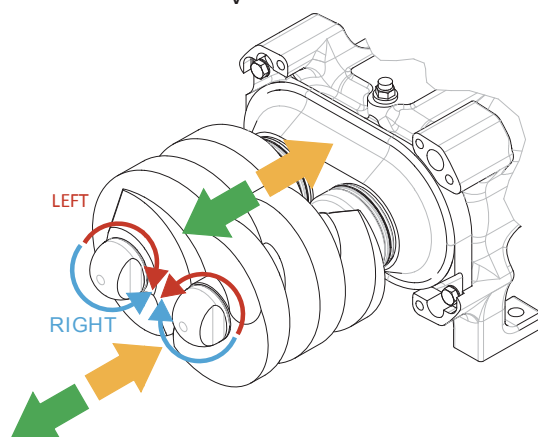

|                    |       | Flowdirection |   |
|--------------------|-------|---------------|---|
|                    |       | V             | A |
| Rotation-direction | LEFT  |               |   |
|                    | RIGHT |               |   |

**For example: The medium will flow toward the cover nozzle in 'Forward' flow direction and left-hand drive rotation**

## Chapter 9

### 9.4 Shaft seal

#### 9.4.1 Shaft seal (single-acting)

##### Disassembly:

1. Disassemble cover 1012.
2. Disassemble pump housing 1033.
3. Disassemble both screw spindles.
4. Pull down inboard rotor holders 80 from the shaft. Inserted in it are seal face 40, drive pins 210 as well as O-rings 90, 130 and 220. Twist the inboard rotor holder quickly while pulling to separate the seal faces.
5. Loosen screws 2259 of seal housing 1029 and remove it from the shafts along with the remaining seals.
6. Remove the inboard stators 11 from the seal housing. Remove O-rings 140 located in the front section of the seal housing.
7. Using circlip pliers, grasp and remove the retaining rings 200 on the rear of the seal housing. In addition, remove spacers 190, backup rings 180 as well as wave rings 50 in backward direction.
8. Finally, remove drive disc 150 along with drive pins 210 from the seal housing.

#### ATTENTION

#### Possible damage to property

- Equally clean the seal housing as well as the shafts and seal seats and carefully check the removed parts. Replace any damaged parts as well as all O-rings and shaft sealing rings
- During disassembly be careful about the drive pins 210. If they get lost use new ones. Therefore use grease to stick them in the holes of the drive discs 150 and inboard rotor holders 80 respectively.


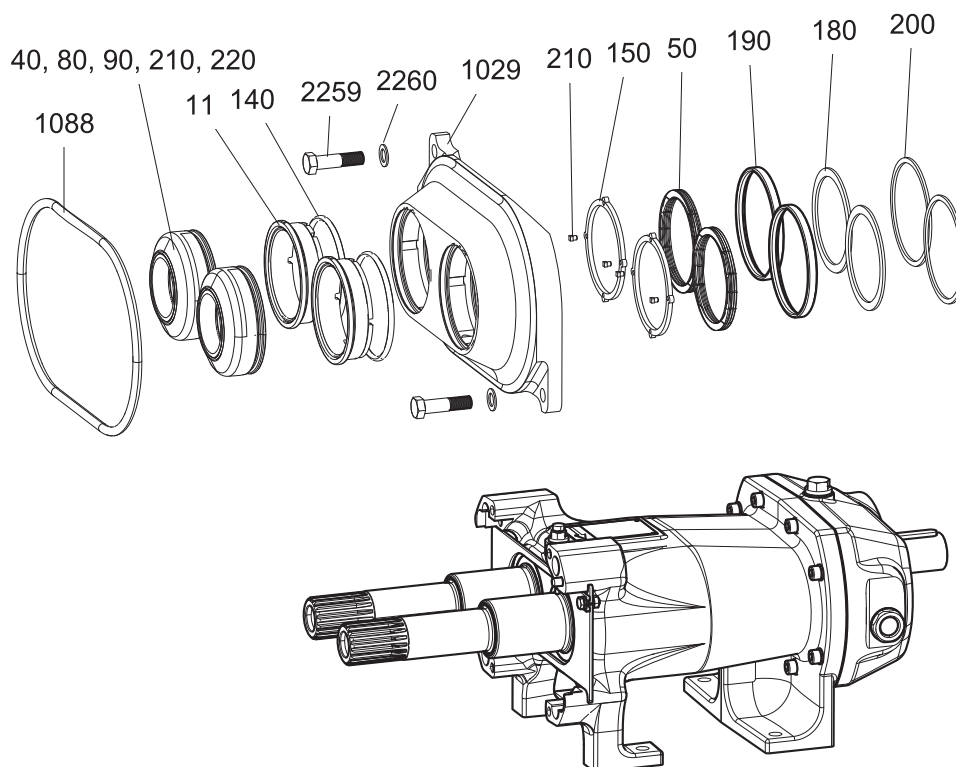


Fig. 9.5a

## Chapter 9

### Installation:

1. Insert drive disks 150 with the pre-assembled drive pins 210 (glue them into the disc ring using grease) into the seal housing from behind. The drive pins must be directed to the front
2. Fit backup rings 180 into the rear groove of the seal housing. Push wave ring 50 against it from behind. Slide spacers 190 against it.
3. Insert retaining rings 200 using circlip pliers.
4. Insert O-rings 140 into the front groove of the seal housing.
5. Carefully slide the seal housing onto the shafts. Position screws 2259 with washers 2260 and screw them into the pump casing. Tighten the fitting screws (10 Nm torque).
6. Carefully slide inboard stators 11 into the seal housing via the shaft. The stator groove must engage with drive pins 210 of drive disc 150. (see picture)
7. Place inboard rotors 80 incl. seal faces 40 and built-in O-rings onto the shaft.

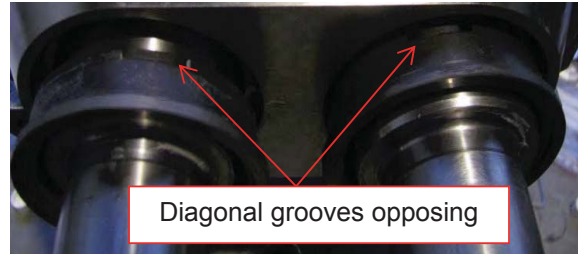

### ATTENTION

#### Possible damage to property

- Check the free room of motion of the sealing by pushing the inboard rotor holder and spinning it bidirectional. During spinning a small gap shall be noticeable, coming from the gap between the drive pins 210 and the grooves they are positioned in the seal faces. During pushing the gap between the stator 11 and the seal housing 1029 shall stay circular constant.


- Therefore dimension A in the drawing showing the sealing cross section shall be controlled. (depth gauge)

**A = 33.3  $\pm$ 0.3 mm (ViscoTwin 130); 25.2  $\pm$ 0.3 mm**

### 8. (ViscoTwin 130)

When installing the screw spindles make sure that the O-rings 130 (are located to the front of the inboard rotor holders) are correctly placed in their receptacle. The seals will now be prestressed during the installation of the screw spindles.

9. Insert O-ring 1088 in seal housing, insert pump housing 1033.
10. Screw in screws 1016 with washers 1015 and tighten. (torque 150Nm)
11. Set cover in place with O-ring 2192, screw in screws 1041 and tighten them. (torque 150Nm)

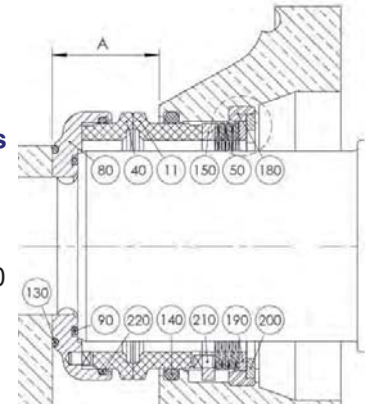

### ATTENTION

#### Possible damage to property

- Slide the screw spindles together onto the shafts.
- Before screwing in the spindle screws, wet both spindle screws 2180 at the spindle nuts with a thread-locking compound (factory uses Loctite 270).
- Observe the required tightening torques (Chapter 4)
- When replacing screw spindles, you will also need to synchronize them via the pinion gear drives (see Chapter 9.6)
- Keep the sliding surfaces free from dust and grease. Avoid any contact with the hands. If necessary, clean with a soft, clean cloth and acetone.

## Chapter 9

### 9.4.2 Shaft seal (single-acting with quench)

#### Disassembly:

1. Drain the quench fluid. Disassemble the auxiliary systems.
2. Disassemble cover 1012.
3. Disassemble pump housing 1033.
4. Disassemble both screw spindles.
5. Pull down inboard rotor holders 80 from the shaft. Inserted in it are seal face 40, drive pins 210 as well as O-ring 90, 130 and 220.
6. Loosen screws 2259 of seal housing 1029 and remove it from the shafts along with the remaining seals.
7. Remove the inboard stators 11 from the seal housing. Remove O-rings 140 located in the front section of the seal housing.
8. Press out the shaft seals 2272 from seal housing.
9. Using circlip pliers grasp and remove the retaining rings 200 on the rear of the seal housing. In addition, remove spacers 190, backup rings 180 as well as wave rings 50 in backward direction.
10. Remove drive disc 150 along with drive pins 210 from the seal housing.
11. Loosen sets screws 1064 in shaft sleeves and pull off of from shafts. Remove Centrifugal disk 2275. Renew shaft seal 2272 and the centrifugal disk 2274.

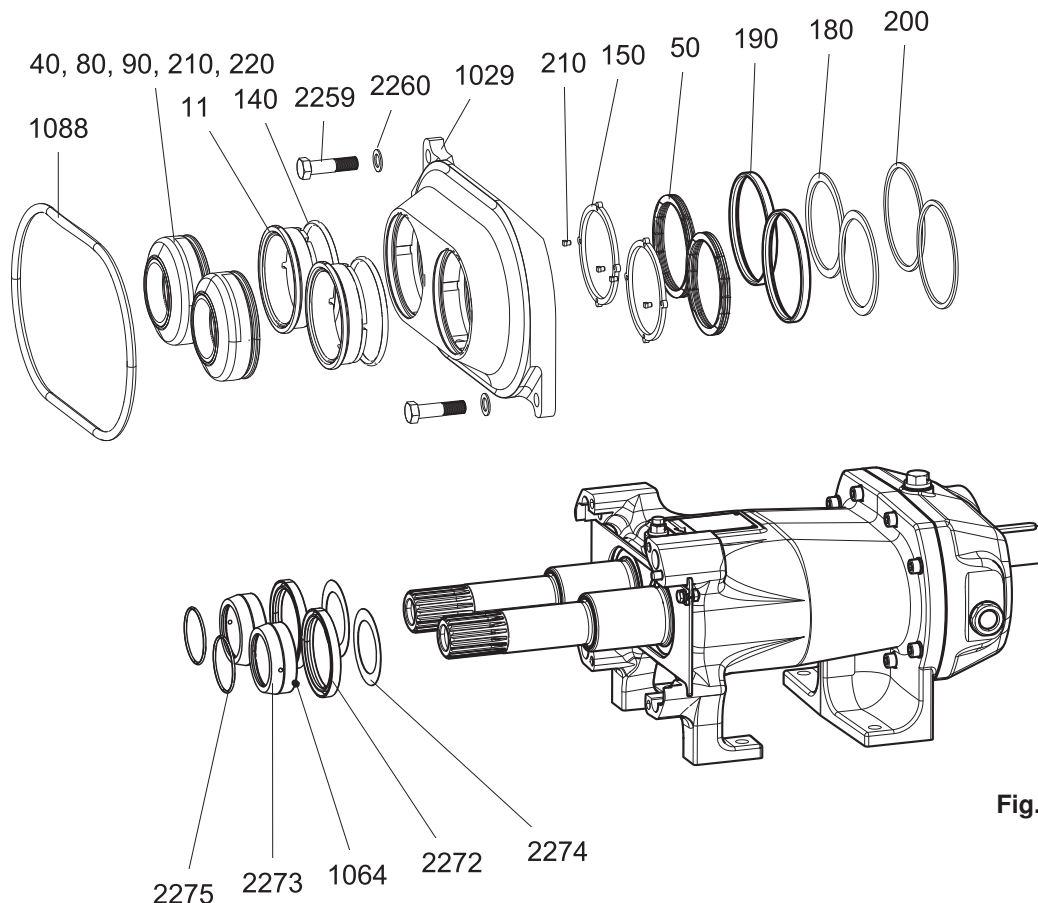


Fig. 9.5a

## Chapter 9


### ATTENTION

#### Possible damage to property

- Equally clean the seal housing as well as the shafts and seal seats and carefully check the removed parts. Replace any damaged parts as well as all O-rings and shaft sealing rings
- During disassembly be careful about the drive pins 210. If they get lost use new ones. Therefore use grease to stick them in the holes of the drive discs 150 and inboard rotor holders 80 respectively.

#### Installation:

1. Insert disc rings 150 with the pre-assembled drive pins 210 (glue them into the disc ring using grease) into the seal housing from behind. The drive pins must be directed to the front.
2. Fit backup rings 180 into the rear groove of the seal housing. Push wave ring 50 against it from behind.
3. Slide spacers 190 against it.
4. Insert retaining rings 200 using circlip pliers.
5. Insert O-rings 140 into the front groove of the seal housing.
6. Insert centrifugal disk 2274 onto both shafts (against the shaft, shoulder its must be tight)
7. Insert O-rings into shaft sleeves 2273. Lightly grease the shaft sleeves 2273 and push against the centrifugal disk 2274. Screw in set screws 1064 into the shaft sleeves while keeping pushed towards the centrifugal disk and fix it. (1.5 Nm torque)
8. Press in shaft seals 2272 into seal housing 1029.
9. Carefully slide the seal housing onto the shafts. Position screws 2259 with washers 2260 and screw them into the pump casing. Tighten the fitting screws (10 Nm torque).
10. Carefully slide inboard stators 11 into the seal housing via the shaft. The stator groove must engage with drive pins 210 of drive disc 150. (see picture)
11. Place inboard rotor holders 80 incl. seal faces 40 and built-in O-rings onto the shaft.

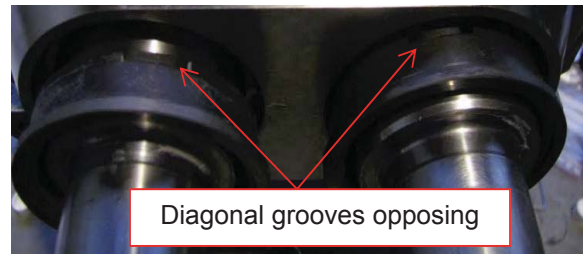


### ATTENTION

#### Possible damage to property

- Check the free room of motion of the sealing by pushing the inboard rotor holder and spinning it bidirectional. During spinning a small gap shall be noticeable, coming from the gap between the drive pins 210 and the grooves they are positioned in the seal faces. During pushing the gap between the stator 11 and the seal housing 1029 shall stay circular constant.
- Therefore dimension A in the drawing showing the sealing cross section shall be controlled. (depth gauge)

**A = 33.3  $\pm$ 0.3 mm (ViscoTwin 130)**

12. When installing the screw spindles make sure that the O-rings 130 (located to the front of the inboard rotor holders) are correctly placed in their receptacle. The seals will now be prestressed during the installation of the screw spindles. (see 9.3.4)
13. Insert O-ring 1088 in seal housing, insert pump housing 1033.
14. Screw in screws 1016 with washers 1015 and tighten them. (torque 150Nm)

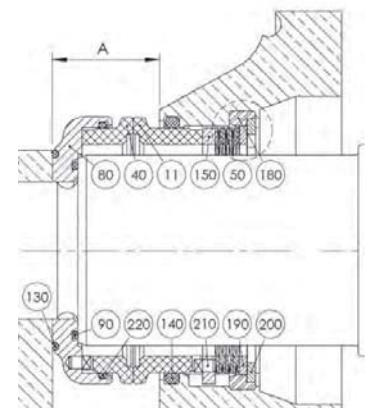

## Chapter 9

15. Set cover in place with O-ring 2192, screw in screws 1041 and tighten them. (torque 150Nm)
16. Connect quench chamber, fill up fluid and vent the shaft seal.

### **ATTENTION**

#### Possible damage to property

- Slide the screw spindles together onto the shafts.
- Before screwing in the spindle screws, wet both spindle screws 2180 at the spindle nuts with a thread-locking compound (factory uses Loctite 270).
- Observe the required tightening torques (Chapter 4)
- When replacing screw spindles, you will also need to synchronize them via the pinion gear drives (see Chapter 9.6)
- Keep the sliding surfaces free from dust and grease. Avoid any contact with the hands. If necessary, clean with a soft, clean cloth and acetone.

### 9.4.3 Double-acting mechanical seal

#### 9.4.3.1 Disassembly of double acting mechanical seals

1. Relieve quench system or counter-pressure device, drain quench fluid.
2. Disassemble cover 1012.
3. Disassemble pump casing 1033.
4. Disassemble spindle screws 2180 and spindles (twin screws) 2200, 2201.
5. Remove inboard rotor holder 1303BC-80 incl. seal faces 1303BC-40 from the shafts. This will also disassemble O-rings 90, 130 and 220 as well as drive pins 210.
6. Loosen fitting screws 2259 and remove them along with washers 2260.
7. Remove the seal housing 1029 via the shafts.
8. Remove Inboard stators 11 on the front side from seal housing 1029. Remove O-rings 140.
9. Pull out outboard stators 12 from the seal housing via the rear side of the seal housing. Remove O-rings 140 and backup rings 170.
10. Remove disc rings 150 along with built-in drive pins 210 from the seal housing.
11. Pull off outboard rotors 20 from the shafts.
12. Remove wave rings 50 from the shafts.
13. Loosen the threaded pins of stop rings 110 and pull off the stop rings 60 incl. O-rings 30 and 160 from the shafts.

### **ATTENTION**

#### Possible damage to property

- Equally clean the seal housing as well as the shafts and seal seats and carefully check the removed parts. Replace any damaged parts as well as all O-rings and shaft lip type seals.
- During disassembly be careful about the drive pins 210. If they get lost use new ones. Therefore use grease to stick them in the holes of the drive discs 150 and inboard rotor holders 80 respectively.


#### 9.4.3.2 Assembly of double acting mechanical seals

see following pages.

## Assembly of double Acting Mechanical Seals



### Step 1: placing O-Rings

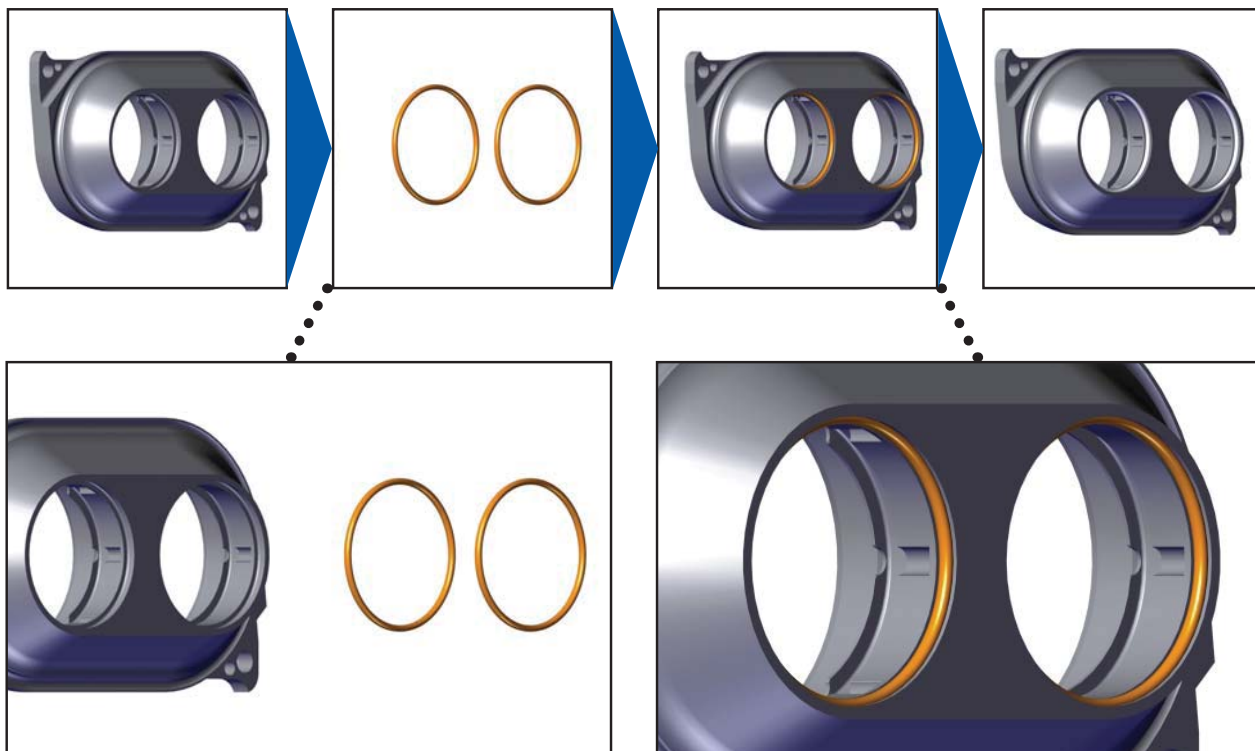

#### Tool/ Components:


Food Grade Grease  
Cleanser  
Cleaning-Cloth  
O-rings 58x3 Pos.3 (2x)

#### Steps:

- Clean O-ring grooves
- put lubricant on O-rings (thin layer only)



### Step 2: placing seal-faces on product side

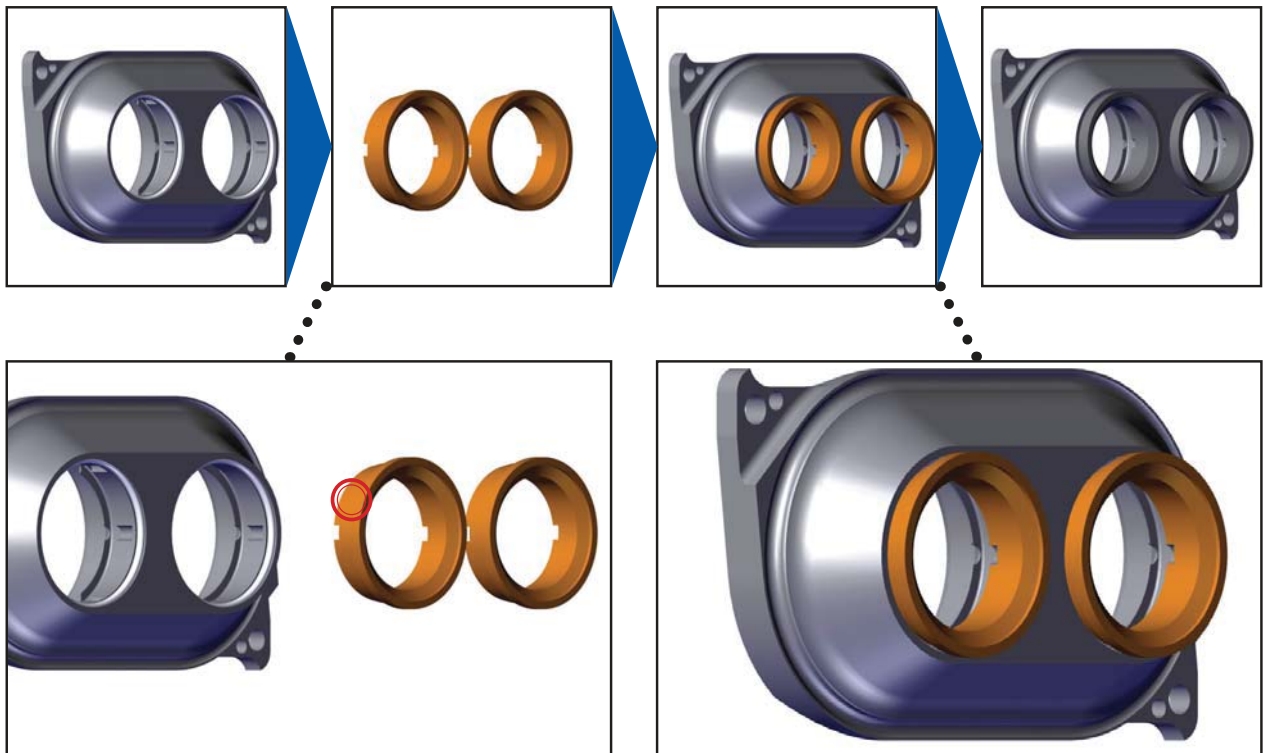

#### Tools / Components:

Lubricant

SealFace Pos. 1 (2x)

#### Steps:

Outer surface of seal faces cover with thin layer of lubricant


Carefully place the seal faces straight into place. Grooves need to fit over cross.

#### Caution:

Front of seal face is delicate, do not use tools. Scratches will lead to leakage.



### Step 3: set pressure rings

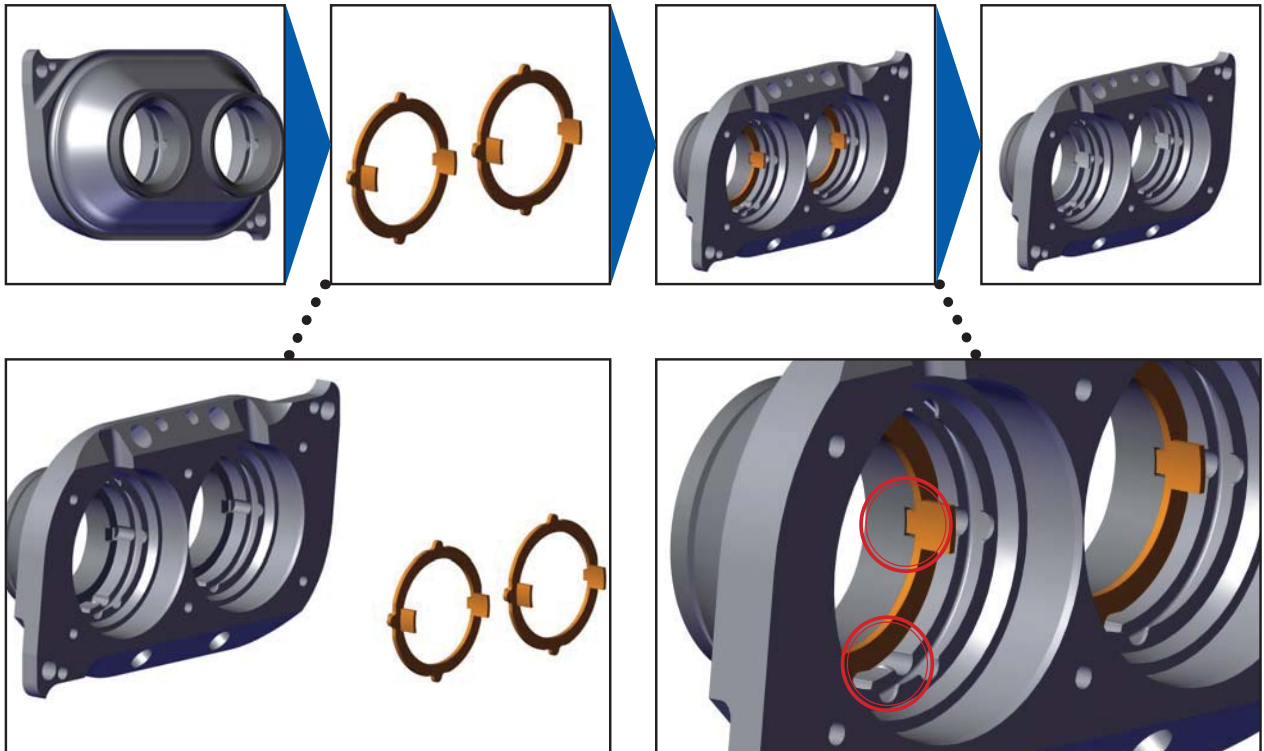


**Tools / Components:**  
Pressure Ring Pos. 7 (2x)

#### Steps:

Place pressure ring into grooves  
place into grooves in positions:


12-3-6-9

Keep flushing grooves clear!

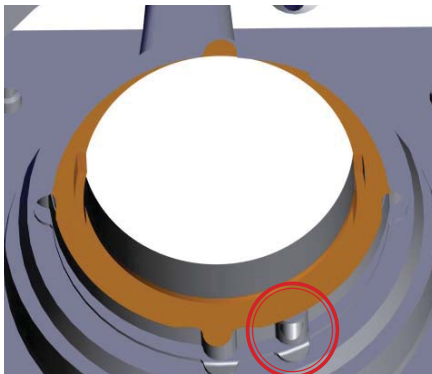



## Step 4: place plastic safetyrings

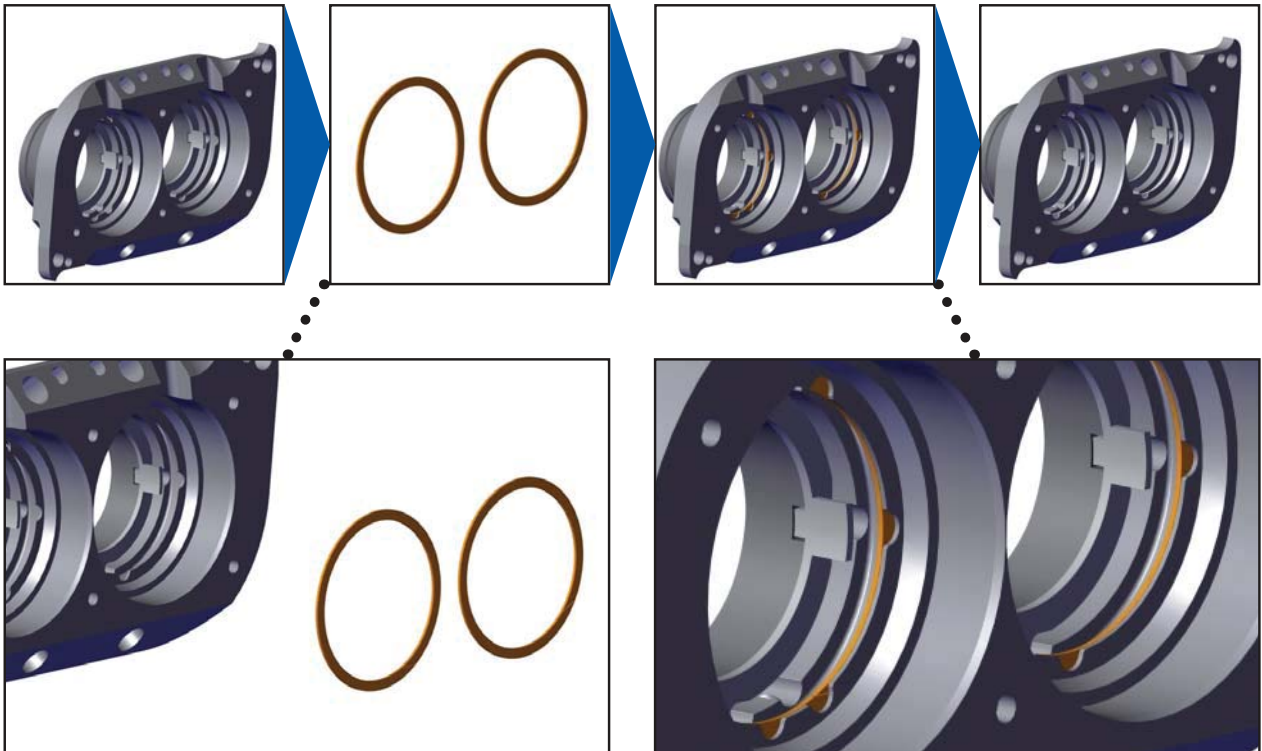

### Tools / Components:

Safety rings Pos.13 (2x)

### Steps:

Clean grooves thoroughly


insert safety rings and insure snug  
fit to rim

Do not rip safety ring apart

## Assembly of double Acting Mechanical Seals



### Step 5: place O-Rings 43x2

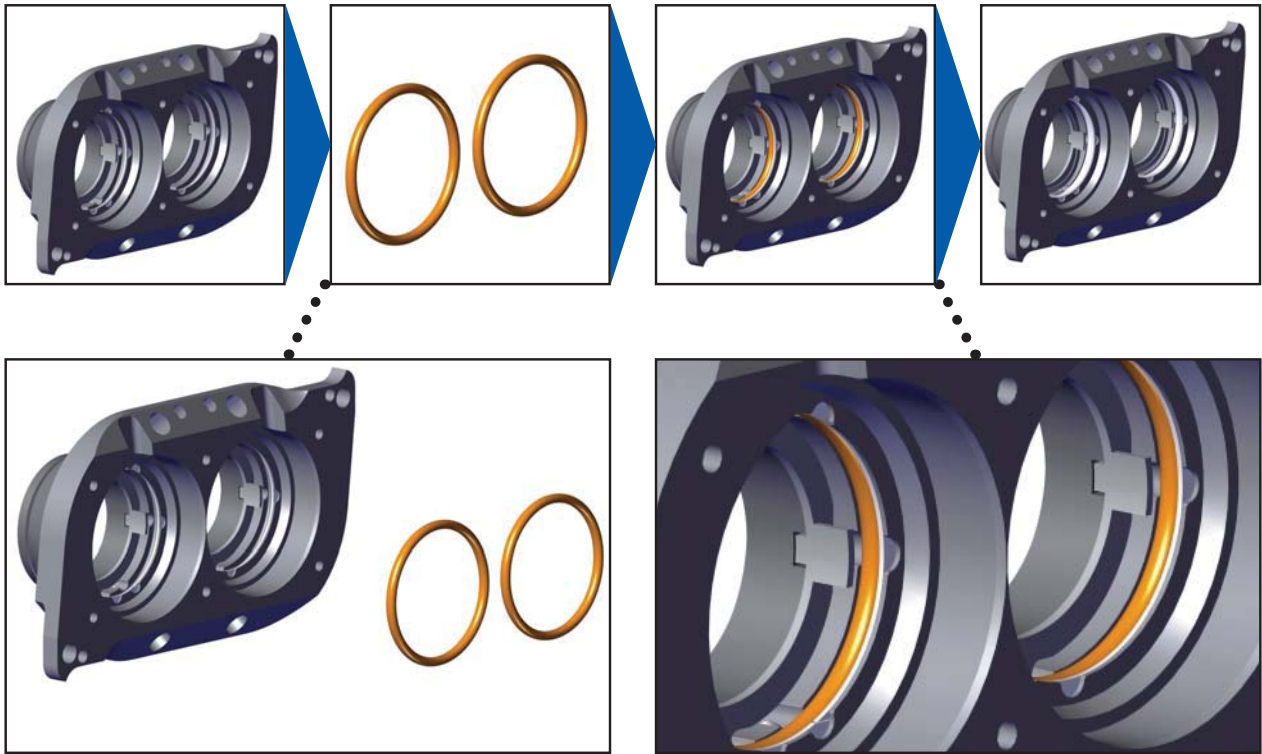


#### Tools/Components:

O-Rings Pos. 4 (2x)


#### Steps:

Place O-ring behind safetyring

## Assembly of double Acting Mechanical Seals

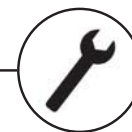

### Step 6: place sinus-spring 43x2

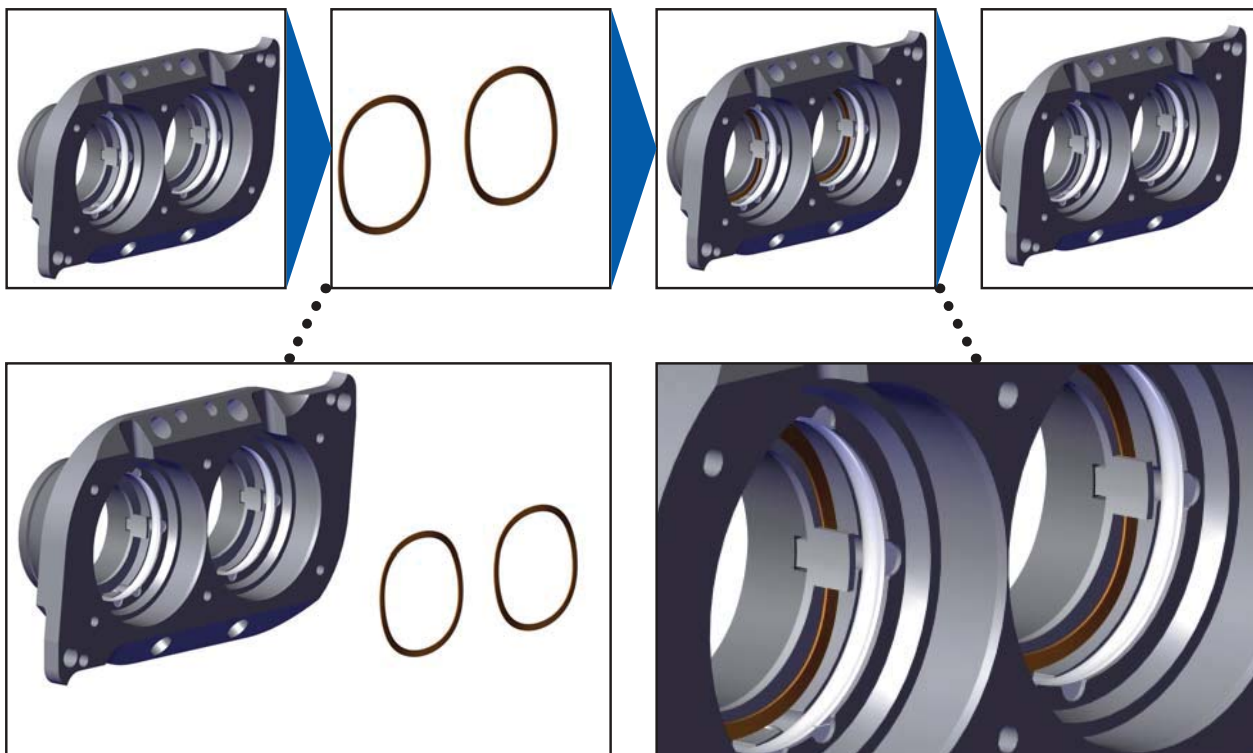


**Tools / Components:**  
Sinus spring Pos. 8 (2x)

**Steps:**  
Place Sinus spring at Pos. 8

## Assembly of double Acting Mechanical Seals



### Step 7: place seal face atmospheric

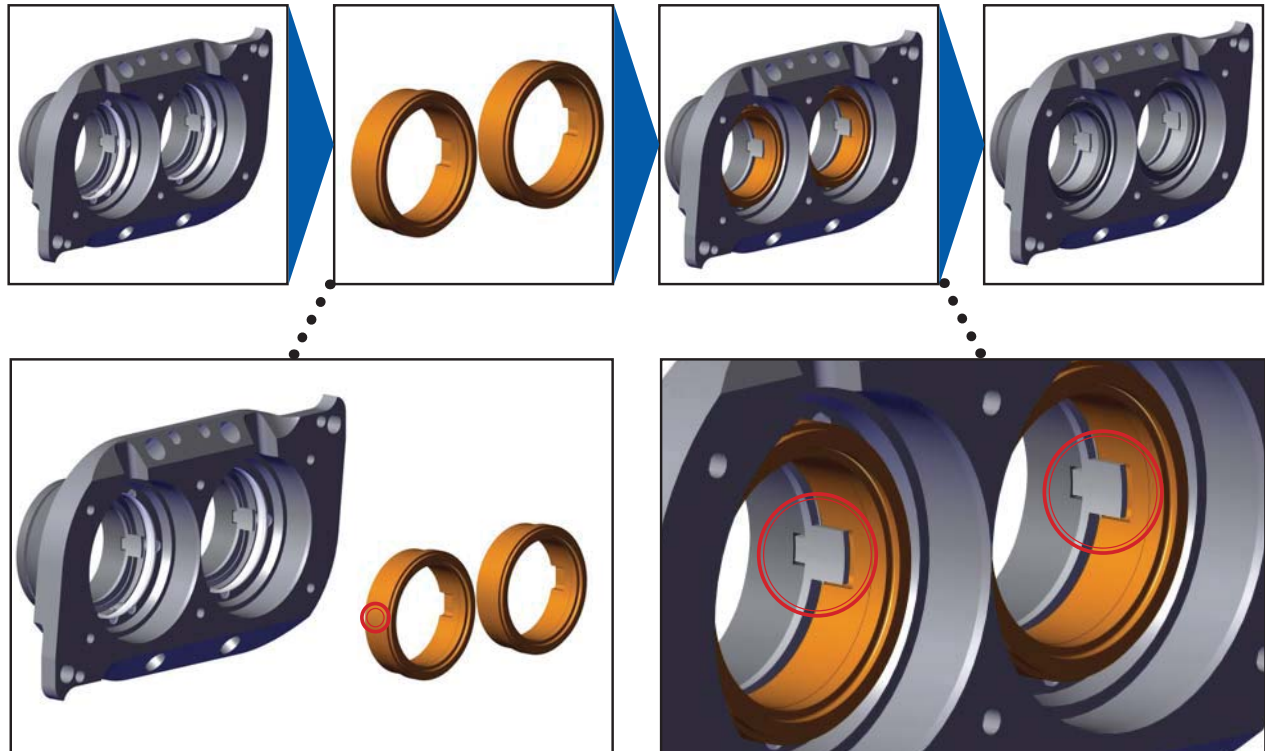

#### Tools / Components:

Seal faces Pos. 2 (2x)


#### Steps:

Put a thin layer of lubricant on the outside of the seal face.  
Place seal face (Pos.2) the way the groove of the seal face fits the cog of the pressure ring (Pos.7) on both sides accurately

## Assembly of double Acting Mechanical Seals



### Step 8: mounting locking plate

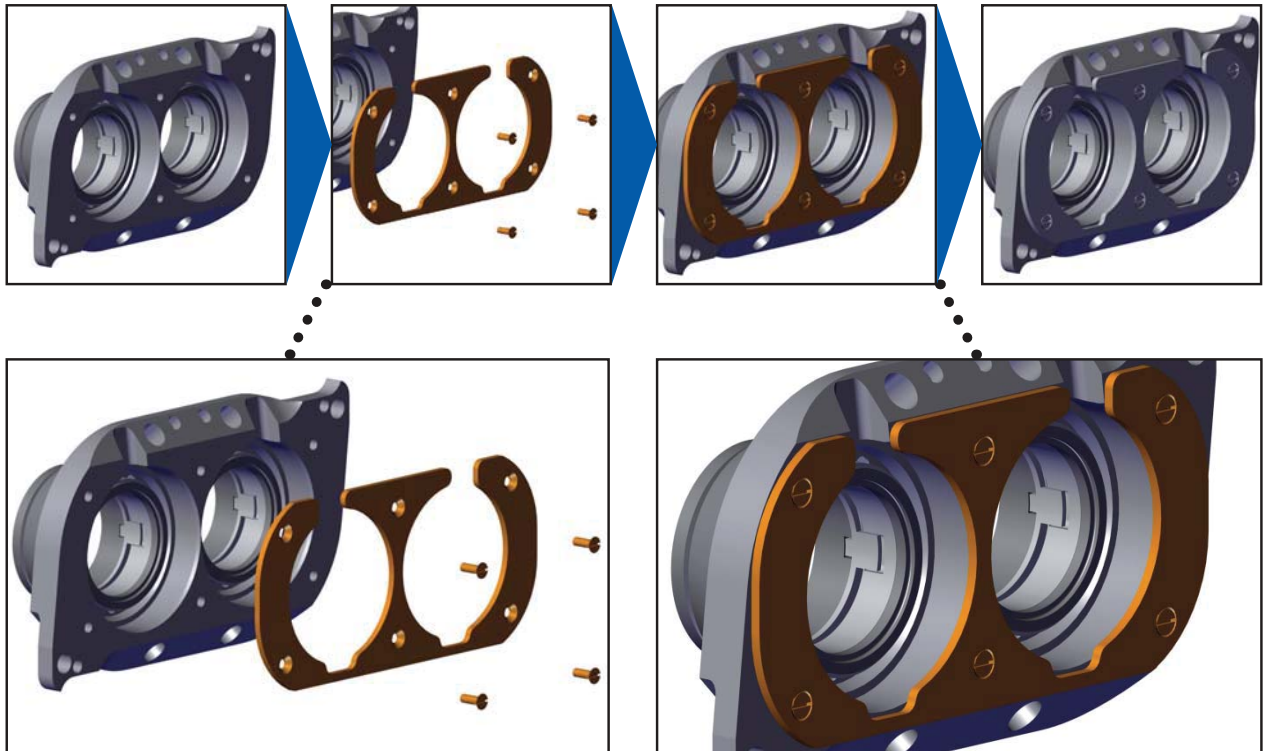

#### Tools / Components:

Screw driver  
Lubricant


Cleanser/Cleaning Cloth  
Locking plate 2324  
countersunk head screws 2325

#### Steps:

Lubricate countersunk head screws  
Clean locking plate  
mount locking plate 2324 on sealing body 1029  
with countersunk head screws  
torque to 7.375 lb/ft (10 Nm)



## Step 9: mounting of flushing-sockets

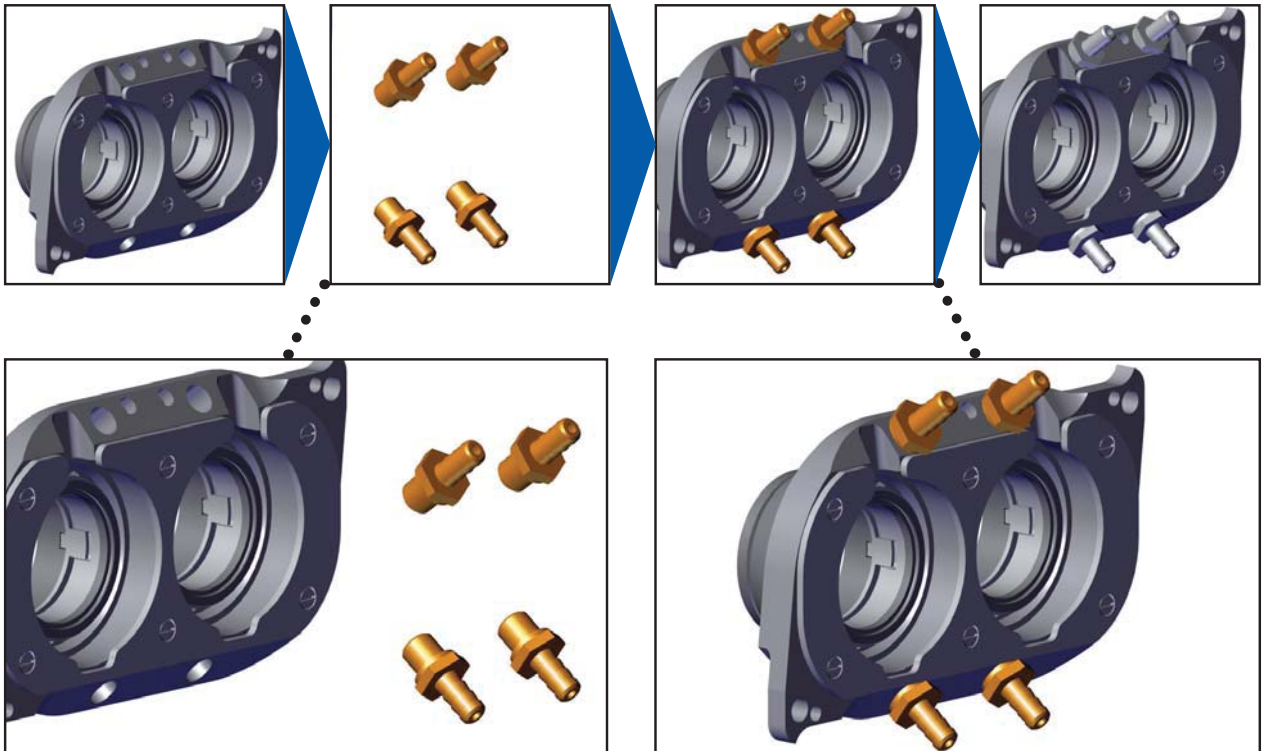

### Tools / Components:

Teflonband (for sealing)

Wrench SW19

for double acting mechanical seals:  
Flushing hose-sockets 1864 (4x)

For single acting n=mechanical seals:  
Lamellar plugs 1966 (4x)

### Steps::

Wrap some Teflon band around the outer thread of the nipples. (Depending on the sealing type, a different connection might be applicable:


- Double acting mechanical seal
- single acting mechanical seal

Torque to :14.750 lb/ft |(20Nm)

## Assembly of double Acting Mechanical Seals



### Step 10: Mounting of guard plate

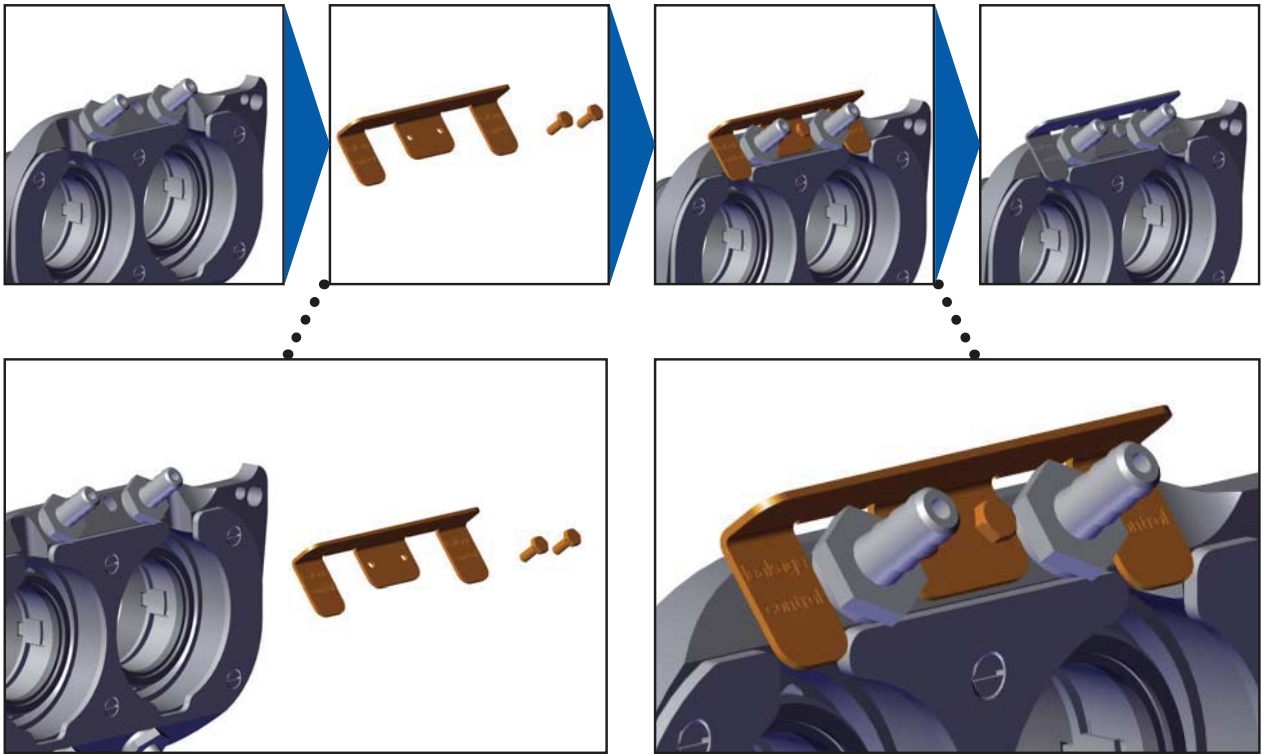

#### Tools / Components:

Loctite, blue (medium hard))  
Wrench SW8

guard plate 2286  
Hexhead bolt 2287 (2)

#### Steps:


Drip a small amount of locktite blue  
on hexhead thread

Torque: 7.375 lb/ft ( 10Nm)

## Assembly of double Acting Mechanical Seals



### Step 11: mounting of stationary seat rings

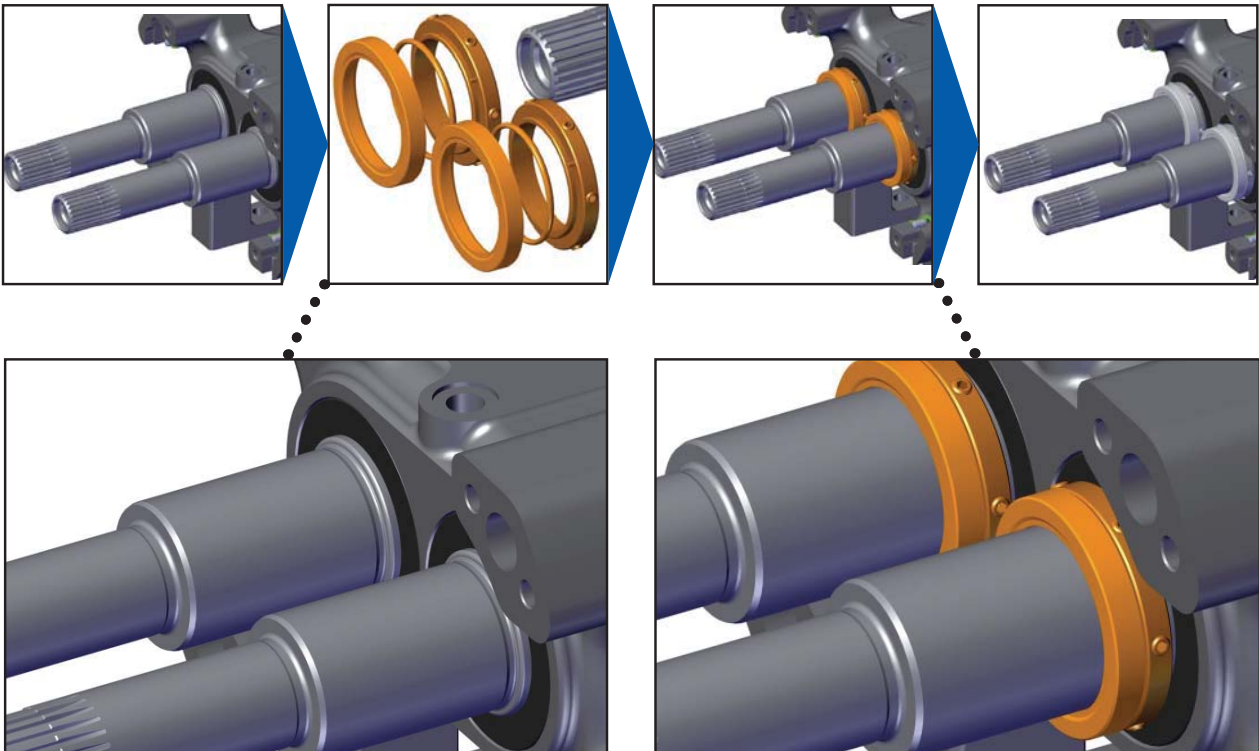

#### Tools / Components:

Allen key 2,5                      Loctite  
blue (medium strength)  
Stationary Seat rings  
Pos. 6; 11;14; 15



#### Steps:

Position stationary seal rings to  
suspension point .  
Lubricant threads of set-screws.


Caution: tigh the set crews cross wise

Torque: 3.68 lb/ft ( 5Nm)

## Double Acting Mechanical Seal



### Step 12: set sealing body in place

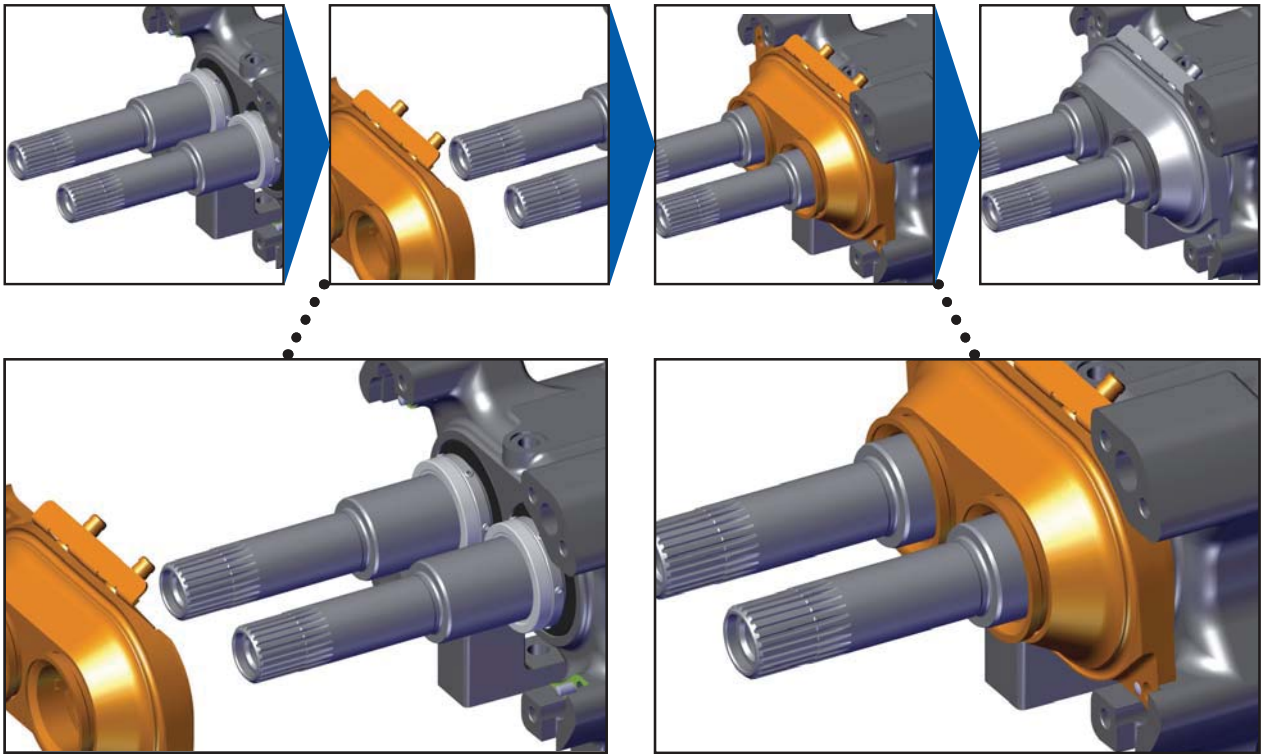

#### Tools / Components:

Double acting mechanical  
seals premounted  
cleanser & cleaning cloth

#### Steps:


Degrease and clean seal face  
surfaces Pos.2 + Pos.6

Implement sealing body

## Assembly of double Acting Mechanical Seals



### Step 13: tighten sealing body on bearing housing

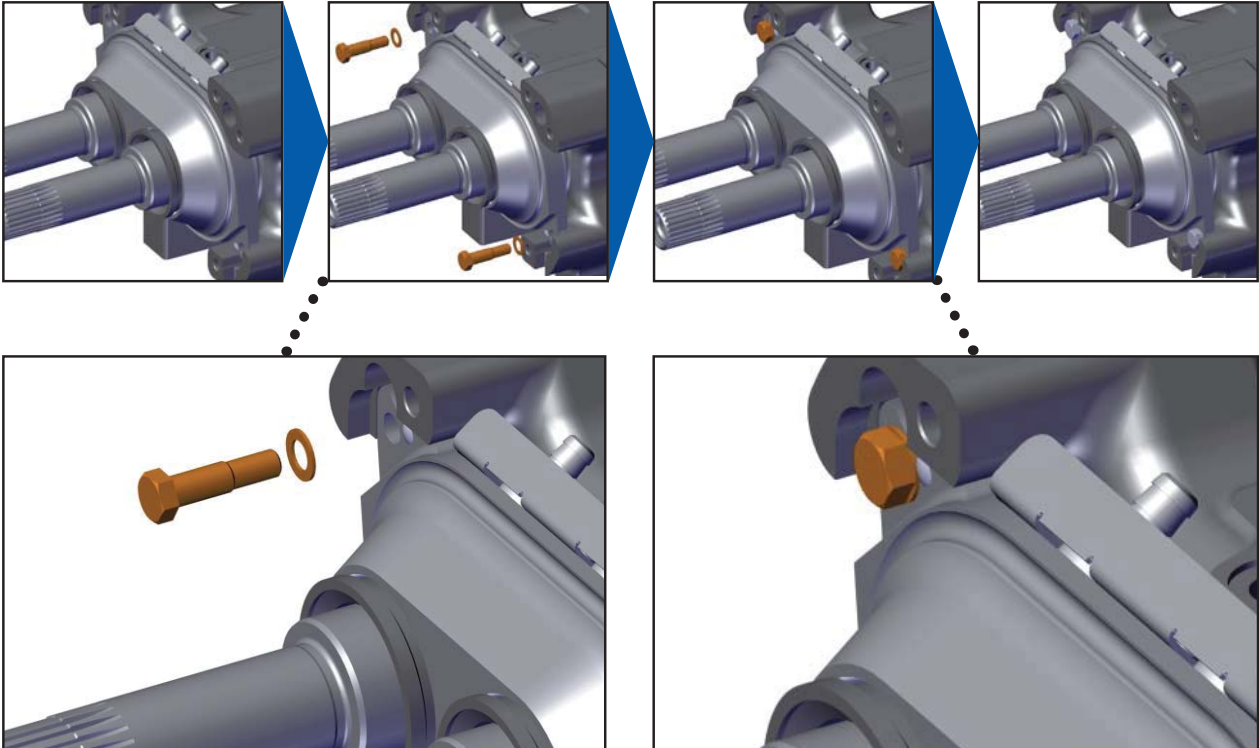

#### Tools / Components:

Socket wrench  
socket SW13 Dowel  
screw 2259 (2x)  
Washer 2260 (2x)

#### Steps::


screw in dowel screw and washer in  
the bearing housing 2276

Torque to :59 lb/ft ( 80Nm)

## Assembly of double Acting Mechanical Seals



### Step 14: position insert ring

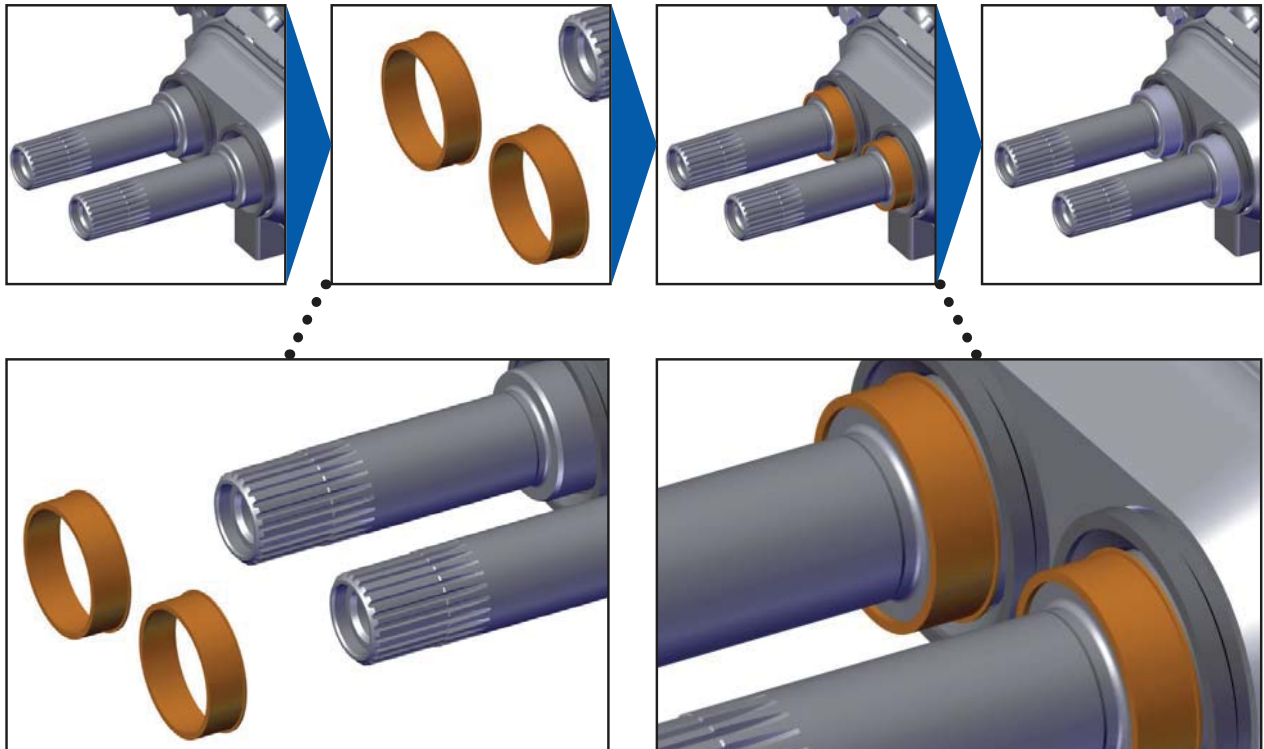

#### Tools / Components:

Cleanser  
Cleaning Cloth  
Lubricant  
Insert ring Pos.16 (2x)


#### Steps:

Clean insert rings  
clean drive shafts  
Lubricate joining area  
position insert rings

## Assembly of double Acting Mechanical Seals



### Step 15: mounting of seal faces on product side

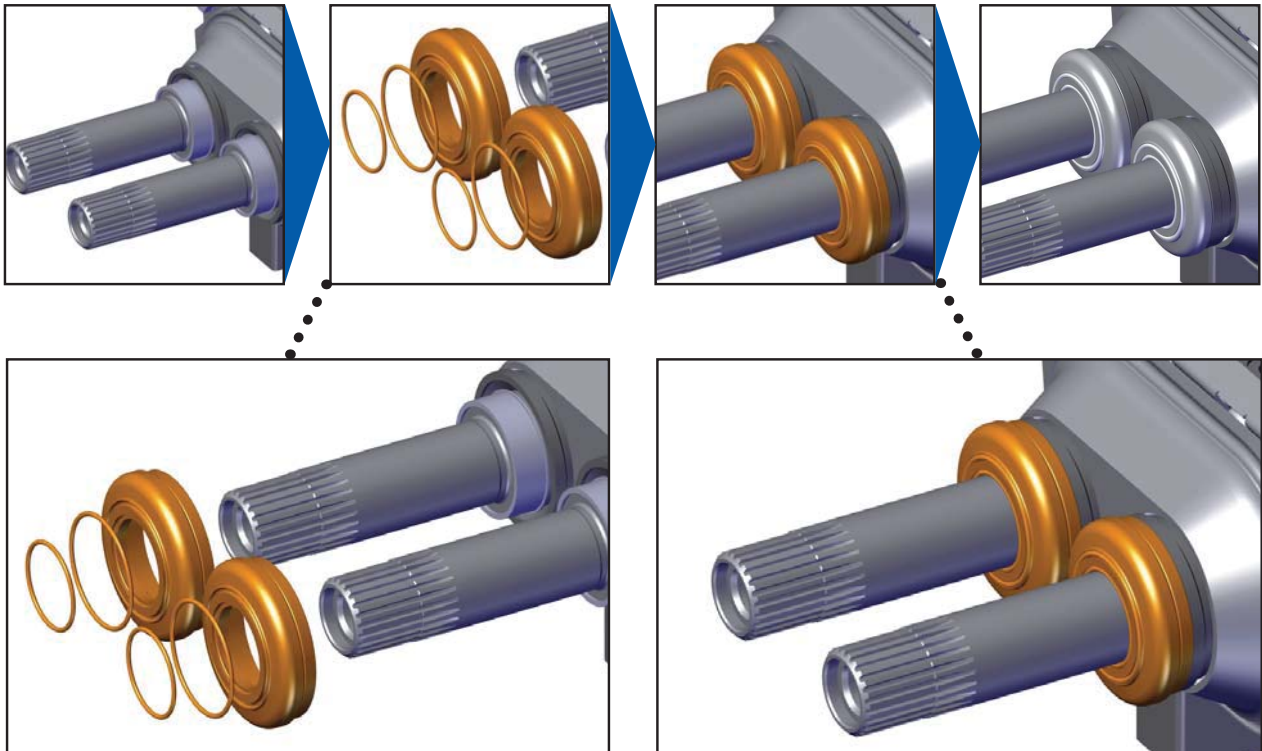

#### Tools / Components:

Cleanser/  
cleaning cloth  
Lubricant  
O-ring Pos. 9 (2x)  
O-ring Pos 12 (2x)  
  
O-ring Pos. 3 (2x)  
  
Sealing housing Pos. 10 (2x)  
Rotating seal face Pos. 5 (2x)  
Pins Pos. 17 (4x)

#### Steps:

Lubricate O-rings Pos. 9 and Pos. 12  
Insert O-rings Pos. 9 and Pos. 12 in the  
seal face housing Pos. 10 .

position seal face housing on drive  
shafts until snug fit  
Pos. 9;12;3;10;5;17

Caution: degrease seal faces before  
positioning seal face housing Pos. 5  
This step is important to prevent from  
braking seal faces due to extended  
period of non-operating the pump.

Assembly of double Acting Mechanical Seals



Final checklist

|                                   |  |                                   |  |                                   |  |                                   |  |
|-----------------------------------|--|-----------------------------------|--|-----------------------------------|--|-----------------------------------|--|
| <input type="checkbox"/> 1. Step  |  | <input type="checkbox"/> 2. Step  |  | <input type="checkbox"/> 3. Step  |  | <input type="checkbox"/> 4. Step  |  |
| <input type="checkbox"/> 5. Step  |  | <input type="checkbox"/> 6. Step  |  | <input type="checkbox"/> 7. Step  |  | <input type="checkbox"/> 8. Step  |  |
| <input type="checkbox"/> 9. Step  |  | <input type="checkbox"/> 10. Step |  | <input type="checkbox"/> 11. Step |  | <input type="checkbox"/> 12. Step |  |
| <input type="checkbox"/> 13. Step |  | <input type="checkbox"/> 14. Step |  | <input type="checkbox"/> 15. Step |  |                                   |  |

## Chapter 9

### 9.4.4 Bearing

#### Disassembly:



- For this purpose, the following pump elements need to be removed before: drive, coupling elements if necessary, gear housing, cover, pump casing, screw spindles, and shaft seal.
- Disassembled bearings need to be replaced with new ones during the assembly work.



- Be sure to mark the position of the gear wheels to one another now.
- Only loosen screws 2186 when disassembling the gear wheels if the installation of new shafts, screw spindles or a new basic setting of the pump is being intended.

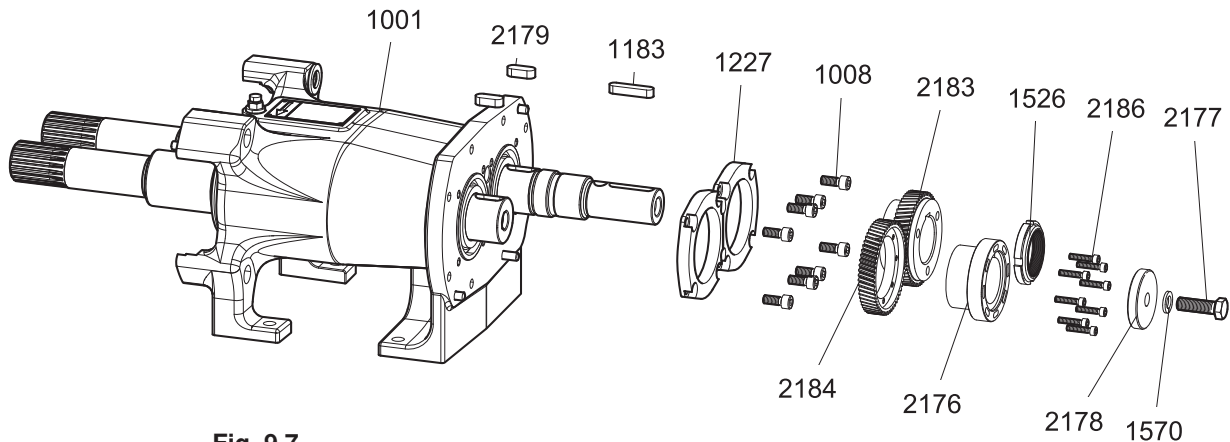



Fig. 9.7

#### Special tools:

**Hook spanner for shaft nut, steel mandrel for counter holding, assembly press, various mounting sleeves**

1. Loosen hexagon screw 2177 of driven shaft 2171 and remove it incl. washer 2178.
2. Pull off gear wheel 2184 incl. hub 2176 from the driven shaft.
3. Loosen and remove shaft nut 1526 of the drive shaft (counter hold via the locking hole in the shaft using a steel mandrel).
4. Remove gear wheel 2183 from the shaft.
5. Remove and store keys 2179.
6. Loosen cylinder head screws 1008 of bearing caps 1227 and remove the bearing caps.

## Chapter 9

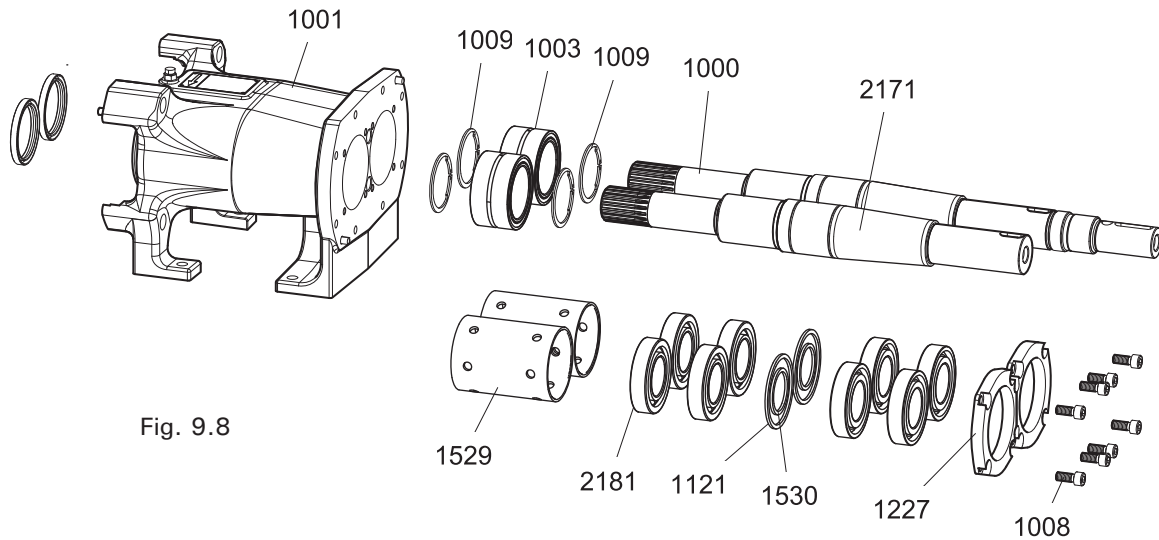

7. Using a press, press out the shafts incl. bearings and distance rings toward the drive end. Afterwards, remove locking rings 1009 and remove the needle bearings from the shaft using an extractor tool. Next, pull out angular ball bearings 2181 from the shaft one after the other and remove distance rings 1530, 1121 and spacer rings 1529. Remove spacer rings 1529 and using a puller, pull out the outer race of the needle bearings from the bearing housing.
8. Press out shaft sealing rings 1010 from the pump casing.


### ATTENTION

#### Possible damage to property

- Carefully equally clean the drive shafts and gear wheels. Replace worn parts.

#### Installation:

1. Place the housing of the bearing bracket onto the press bed
2. Grease the bearing surfaces of the housing. (See Chapter 4 for assembly grease)
3. Likewise apply lubricating agent onto the shafts in the region of the bearing positions.
4. Insert inner snap rings 1009 into the shafts. Press inner sleeves of needle bearings 1003 onto the shafts using a pressure sleeve. Slide on needle bearings. Mount outer snap rings 1009.
5. Place distance tube 1529 onto the shaft.
6. Press 2 each angular ball bearings 2181 one after the other and individually onto the shaft. (Heed installation position, in double O arrangement) (press only the inner races of the bearings) Place distance rings 1521 and 1530 into the middle between the 4 angular ball bearings.
7. Carefully insert the drive shaft incl. fitted bearings into the bearing housing and carefully press fit the shaft with its bearings all the way up using the press and a mounting bush that only presses onto the outer race of the bearing. The last bearing will then only protrude approx. 1 mm from the bearing housing.

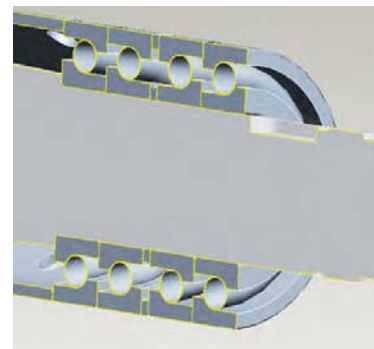

**Fig. 9-9 Angular ball bearing in O arrangement**

## Chapter 9

### ATTENTION

#### Possible damage to property

- **Align the distance bushes and rings precisely when pressing them in otherwise they will be destroyed.**
- 8. Install the driven shaft in similar way.
- 9. Into the bearing housing new shaft seals 1011 press with a mounting sleeve. (The spiral ring of the sealing lip shows in the pump housing).
- 10. Insert both bearing covers 1227, apply thread lock fluid onto cylinder head screws 1008 (factory uses Loctite 270), screw them in and tighten. M8 torque = 20 Nm.
- 11. Lubricate shaft sealing rings 1111, slide them over the toothed shaft ends and carefully fit them into the seat in the bearing housing using a mounting tube (tube D = 75, d = 61, L = 225).
- 12. Insert keys 2179 into the shafts on the drive side.
- 13. Slide gear wheel 2183 onto the drive shaft, screw in and tighten shaft nut 1526 (torque 90 Nm).
- 14. Slide gear wheel 2184 incl. hub 2176 onto the driven shaft. (Observe mark)  
Screw in and tighten screw 2177 incl. washer 1570 and lock washer 2178 (torque 80 Nm).

### ATTENTION

#### Possible damage to property

- **Place a bronze or copper bar into gear teeth of the gear wheels when tightening screw 2177.**
- **Do not use hard metals, such as pry bars or steel bars keeping the sensitive tooth flanks in mind.**
- 15. Place on gear housing 2172 incl. gasket 2198 (housing being centred through dowel pins), screw in and tighten cylinder head screws 2258. (Torque 20 Nm).
- 16. Install shaft seal and screw spindles, mount pressure housing (Torque 150 Nm). Install suction housing (torque XY).
- 17. Mount driving elements (coupling guard).
- 18. Fill in gear oil. Check the oil level via the sight glass.

## Chapter 9

### 9.5 Adjusting screw spindles.

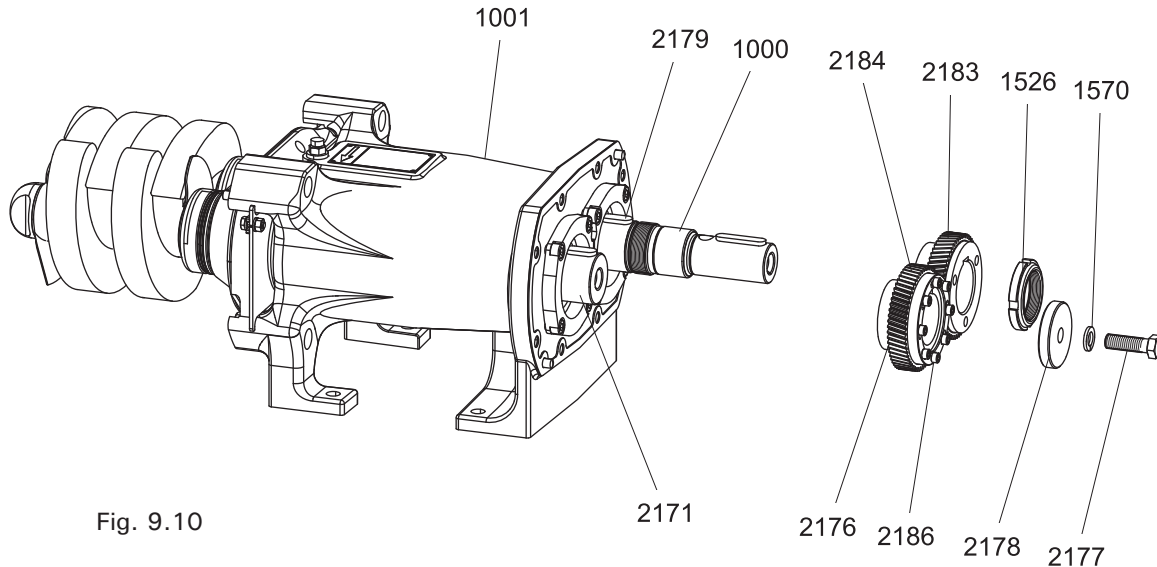


Fig. 9.10

#### Installation:

1. Insert keys 2179.
2. Slide gear wheel 2183 onto the drive shaft 1000, screw on and tighten shaft nut 1526. (Tightening torque 70 Nm for M35, 90 Nm for M45) (Plug steel mandrel through the shaft hole counter holding with it while tightening the shaft nut).
3. Slide on gear wheel hub 2176 incl. gear wheel 2184 onto driven shaft 2171. Turn the gear wheel on the hub until the holes of hub and tapped holes of the gear ring check. (Tapped hole is positioned roughly in the middle of the oblong hole). Note the inclined position of the gear ring.
4. Screw in cylinder head screws 2186 by hand.
5. Place lock washer 2178 onto the driven shaft, screw in and tighten hexagon screw 2177 incl. spring ring 1570. (Torque 80 Nm).

#### ATTENTION

#### Possible damage to property

- Place a bronze or copper bar into gear teeth of the gear wheels when tightening screw 2177.
- Do not use hard metals, such as pry bars or steel bars keeping the sensitive tooth flanks in mind.

## Chapter 9

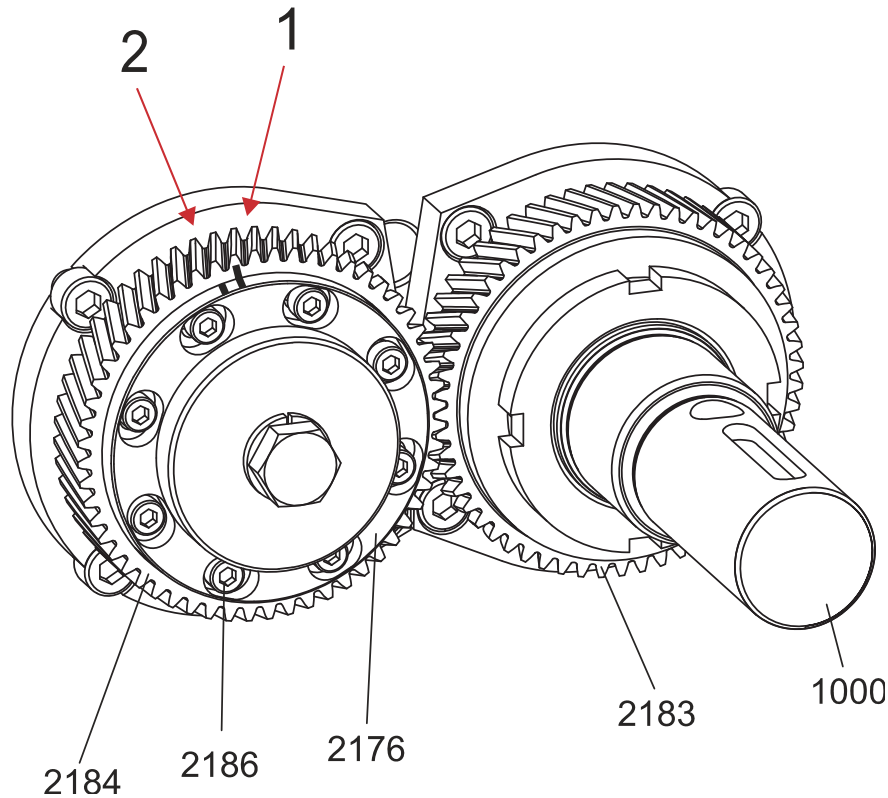


Fig. 9.11

### Adjustment:

1. Turn drive shaft 1000 until the spindles stop.
2. Mark this position on gear wheel hub 2176 and driven gear wheel 2184.
3. Now turn the drive shaft into the opposite direction until the spindles jam.
4. Mark this position on gear wheel hub 2176, too.
5. Turn back the drive shaft by a half of this mark. The screw spindles are freely moving now.
6. Now tighten cylinder head screws 2186 crosswise in alternating fashion.



- Tightening torque of the cylinder head screws = 8 Nm

## Chapter 10

### 10. Stocking of spare parts

#### 10.1 Spare parts

Wear and hence the life-cycle of the major pump components are essentially influenced by a variety of factors, such as:

- Working pressure,
- Temperature,
- Properties and condition of the pumping medium,
- System operating times.

We recommend stocking up the major spare parts as per table below. You will thus reduce the MTTR values (Mean Time to Repair) (recommendation acc. to DIN 24296).

| Number of same pumps per system section |          |               |              |
|-----------------------------------------|----------|---------------|--------------|
| Spare parts                             | P-number | up to 2 pumps | from 3 pumps |
| Gear housing shaft sealing ring         | 1010     | 1             | up 2         |
| Bearing housing shaft sealing ring      | 1111     | 2             | 4            |
| Pump casing O-ring                      | 1088     | 1             | 2            |
| Spindle nuts O-ring                     | 2194     | 4             | 8            |
| Cover O-ring                            | 2192     | 1             | 2            |
| Gear housing gasket                     | 2198     | 1             | 1            |
| Shaft seal, set of O-rings              | 2261     | 2             | 4            |
| Gear ring                               | 2249     | 1             | 2            |
| Gear oil, 1 L                           | 2294     | 1             | 2            |

(\*) depending on pump model chosen (see data sheet)

#### **ATTENTION**

**Possible damage to property**

- **Use only original ViscoTwin spare parts to avoid any adverse effects on the functionality of your pump.**

#### 10.2 Ordering spare parts

- Please report to your personal contact at Processtec or report to Processtec by means of phone, facsimile or email (number and email adress see below).
- A pump specific spare part list and/or pump specific spare part explosion drawing is provided by Processtec as part of technical documentation together with the ViscoTwin pump or prior to delivery on request. Please provide **eData-ID** of pump and of spare part to order when ordering. **eData-IDs** are listed in both spare part list and explosion drawings.
- If **eData-ID** is not known, please indicate serial number, type and configuration code of ViscoTwin. Required data are on the pump type label. Most convenient way to collect required data from pump type label is by means of the QR code, which can be read by means of most QR code readers, e.g. on a smart phone. No liability will be assumed for wrong deliveries on account of insufficient data.

|                 |                           |        |                     |
|-----------------|---------------------------|--------|---------------------|
| Where to order: | Processtec, Inc.          | Phone: | +1(559) 429-4227    |
|                 | 345 E Tulare Ave, Unite E | Fax:   | +1(559) 429 4228    |
|                 | Visalia, CA 93277         | Email: | info@processtec.com |

## **Appendix**

- **Tools, expendables and lubricants required for maintenance and servicing**
- **Explosion drawings**
- **The Engineering Design and Technical Construction File**
  - o **CIP | SIP | Manual Cleaning**
  - o **Oil change**
- **Tightening torque values**

Release: Sep 27, 2018

## Tools and expendables required for maintenance and servicing

Maintenance and servicing of ViscoTwin 70 requires US standard, metric as well as specific tools as listed in tables below.

### Definition of maintenance levels

All tools required are categorized by maintenance levels ranging from 1 to 3, whereas maintenance levels are defined as follows:


- Maintenance level 1 tools are required for standard operation and other procedures as follows:
  - o Sanitary inspection
  - o Removal and assembly of pump cover (position 1012) and pump casing (position 1033)
  - o Maintenance and exchange of mechanical seals
  - o Gear oil filling level adjustment and gear oil exchange


→ **Maintenance level 1 tools must be available on site for proper work conditions**
- Maintenance level 2 tools are required for:
  - o All processes requiring removal or mounting of gear housing (position 2172)
  - o Adjustment of spindles (positions 2200 and 2201)

→ **It is highly recommended to have maintenance level 2 tools available on site.**
- Maintenance level 3 tools are required for maintenance of bearing housing
 

→ *It is not necessary to have maintenance level 3 tools on site. Maintenance level 3 tasks are supposed to be processed in Processtec shop.*

### Maintenance level 1 tools and expendables
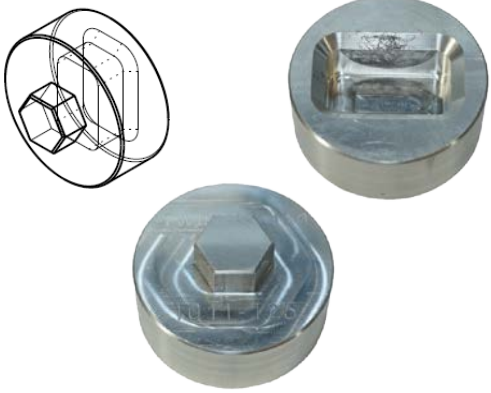
| Description, Purpose<br>3 <sup>rd</sup> party solution                                                     | Related position       | Maintenance level | eData-ID | Material  |
|------------------------------------------------------------------------------------------------------------|------------------------|-------------------|----------|-----------|
| Spindle bolt socket<br> | 2180 /<br>Spindle bolt | 1                 | 12567    | Aluminium |
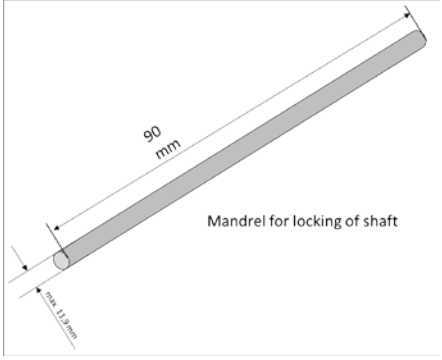
| Description, Purpose<br><i>3<sup>rd</sup> party solution</i>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | Related position                                                                    | Maintenance level               | eData-ID | Material  |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|---------------------------------|----------|-----------|
| <p>Locking rod to block drive shaft</p>  <p>Note: identical rod for all ViscoTwin types</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | 1000 /<br>Drive shaft                                                               | 1                               | 18793    | AISI: 304 |
| <p>Torque wrench <u>small</u> for metric sockets to tighten bolts and screws torque controlled</p> <p>Requirements:</p> <ul style="list-style-type: none"> <li>- Min. torque: <math>\leq 3.68 \text{ lb-ft} \mid 5 \text{ Nm} *</math></li> <li>- Max. torque: <math>\geq \text{min. torque of 'torque wrench 'BIG'}</math></li> <li>- Compatible with all sockets (hexagon or Allen key) as specified by related positions</li> </ul>  <p>Helpful notice:</p> <ol style="list-style-type: none"> <li>*) In case a <u>torque screw driver</u> (see below) is available on site, lowest torque value to handle by means of the <u>small</u> torque wrench is increased accordingly</li> <li>No second wrench is required if whole torque range can be handled by means of 1 torque wrench</li> </ol> | <p>2259<br/>1304<br/>(Dual Acting Mechanical Seals)</p> <p>2258 , 2186<br/>1008</p> | <p>1<br/>1<br/><br/>2<br/>3</p> | -        | -         |
| <p>Torque wrench BIG for metric sockets to tighten bolts and screws torque controlled</p> <p>Requirements:</p> <ul style="list-style-type: none"> <li>- Min. torque: <math>\leq \text{maximum torque of 'torque wrench small'}</math></li> <li>- Max. torque: <math>110.6 \text{ lb-ft} \mid 150 \text{ Nm}</math></li> <li>- Compatible with all sockets (hexagon or Allen key) as specified by related positions</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                          | 2180, 1016, 1041<br>2205, 2279, 1526<br>2177                                        | <p>1<br/>2<br/>2</p>            | -        | -         |

| Description, Purpose<br><i>3<sup>rd</sup> party solution</i>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | Related position                                 | Maintenance level | eData-ID | Material |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------|-------------------|----------|----------|
| <p>(torque wrench big continued)</p>  <p>Helpful notice:</p> <p>1. No second wrench is required if complete torque range can be handled by means of 1 torque wrench</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |                                                  |                   |          |          |
| <p>Best practise for dual acting mechanical seals: <u>Torque screw driver</u> (see also <a href="#">For Dual Acting Mechanical Seals only</a> / <a href="#">Allen key solutions 1 and 2 below</a>)</p> <p>Requirements:</p> <ul style="list-style-type: none"> <li>- Torque min: &lt;= 3.68 lb-ft   5 Nm</li> <li>- Torque max: see 'helpful notice' below</li> <li>- Compatible to <a href="#">Allen key solution 1</a> or <a href="#">solution 2</a> as defined below (see <a href="#">For Dual Acting Mechanical Seals only</a> below)</li> </ul>  <p>Helpful notice1:</p> <p>1. 'Torque max': in case torque screw driver shall be made available on site, it might be sensible to select a torque screw driver for torque values of up to 5.9 lb-ft (8 Nm) or even up to 8.85 lb-ft (12 Nm) and being suitable for hexagon nut sockets (consider wrench drive).</p> <p>2. In case torque screw driver meeting requirements as defined by point 1 or 2 are available on site, <a href="#">min. torque value</a> to handle by means of the <a href="#">small torque wrench</a> is increased accordingly.</p> | <p>1304</p> <p>Anga positions<br/>6,11,14,15</p> | <p>1</p> <p>1</p> | -1       | -        |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | <p>2186</p> <p>2259</p>                          | <p>2</p> <p>2</p> |          |          |

| Description, Purpose<br><i>3<sup>rd</sup> party solution</i>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | Related position                            | Maintenance level          | eData-ID | Material |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------|----------------------------|----------|----------|
| <p>Hexagon nut sockets for</p> <p>Bolts M8    Socket size:    13 mm</p> <p>Bolts M16   Socket size:    24 mm</p> <p>Bolts M18   Socket size:    27 mm</p> <p>- Compatible with torque wrench drive</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | <p>2259</p> <p>1016 , 1041</p> <p>2180</p>  | <p>1</p> <p>1</p> <p>1</p> | -        | -        |
| <p><u>For dual acting mechanical seals only:</u></p> <p>Allen key to tighten hexagon socket screws of outboard rotor holder of double acting mechanical seals.</p> <p>3 different solutions:</p> <p>1. Best practise solution</p> <p>Allen key bit (size 2.5 mm ) compatible to <a href="#">torque screw driver</a>:</p>  <p>Allen key bit with hexagon drive</p> <p>2. Good practice solution</p> <p>Allen key socket (size 2.5 mm) compatible to <a href="#">torque screw driver</a> (possibly adaptor required) or <a href="#">small torque wrench</a> (extension and adaptor required)</p>  <p>3. Minimum solution</p> <p>Allen key (size 2.5 mm)</p>  | <p>1304</p> <p>Anga position 6,11,14,15</p> | 1                          | -        | -        |

## Appendix manual ViscoTwin 130 HP 3A

Tools and expendables required for maintenance and servicing

Maintenance level 1 tools and expendables

| Description, Purpose<br><i>3<sup>rd</sup> party solution</i>                                                                                                                                                                                                                                                                                                       | Related position                       | Maintenance level          | eData-ID | Material |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------|----------------------------|----------|----------|
| <p>Various hooks to remove O-rings gently from grooves. Applicable to all ViscoTwin types.</p>  <p><i>3<sup>rd</sup> party solution:</i><br/>Brand: Craftsman<br/>Name: 4PC Hook and Pick Set<br/>Item #: 00904981000P<br/>Model: 4981</p>                                        | <p>1303<br/>1304<br/>2261<br/>2262</p> | <p>1<br/>1<br/>1<br/>1</p> | -        | -        |
| <p>Metric feeler gage to measure clearance between spindles</p> <ul style="list-style-type: none"> <li>- Min. : 0.04 mm</li> <li>- Max.: 0.30 mm or more</li> </ul>  <p><i>3<sup>rd</sup> party solution:</i><br/>Brand: Eastern Industries<br/>Type: MFG-25-T-76 GC SERIES</p> | 2200 , 2201                            | 1                          | -        | Steel    |
| <p>Quick and second but best solution to loosen spindles from shaft: rubber mallet (rubber hammer).</p>  <p>§</p>                                                                                                                                                               | 2200 , 2201                            | 1                          | -        | rubber   |

## Appendix manual ViscoTwin 130 HP 3A

Tools and expendables required for maintenance and servicing

Maintenance level 1 tools and expendables

| Description, Purpose<br><i>3<sup>rd</sup> party solution</i>                                                                                                                                        | Related position | Maintenance level | eData-ID | Material           |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------|-------------------|----------|--------------------|
| <p>Best practise to loosen spindles from shaft: gear wheel puller with 2 clamps.<br/>Minimum nominal size: 5"</p>  | 2200 , 2201      | 1                 | -        | -                  |
| <p>Support for gear wheel puller to loosen spindle from shaft: hexagon bolts M12 specifically modified</p>        | 2200 , 2201      | 1                 | 18988    | Stainless or steel |
| <p>Protection of spindle when loosening spindle from shaft by means of a gear wheel puller</p>                   | 2200, 2201       | 1                 | -        | Rubber plastic     |
| <p>Tap to remove Loctite from threaded hole of shafts. ISO M16 metric standard thread.</p>                       | 1000 , 2170      | 1                 | -        |                    |
| <p>Tap wrench to drive tap to remove Loctite from threaded hole of shafts</p>                                    | 1000 , 2170      | 1                 | -        |                    |

## Appendix manual ViscoTwin 130 HP 3A

Tools and expendables required for maintenance and servicing

Maintenance level 1 tools and expendables

| Description, Purpose<br><i>3<sup>rd</sup> party solution</i>                                                                                                                                         | Related position                            | Maintenance level | eData-ID | Material |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------|-------------------|----------|----------|
| Wet or Dry Sandpaper CAMI grit 800<br>or<br>Emery cloth grit > 220<br>to polish shafts before mounting spindles<br> | 2200 , 2201                                 | 1                 | -        | -        |
| 3M Scotch Brite to polish surface of<br>spindles and shafts<br>                                                    | 2200 , 2201<br>1000 , 2171                  | 1<br>1            |          |          |
| Paper towels free of lint to clean seal faces<br>of mechanical seals<br>                                          | 2327, 2328                                  | 1                 | -        | Paper    |
| Regular paper towels for cleaning<br>                                                                             | <i>general</i>                              | 1,2,3             | -        | paper    |
| Acetone to clean seal faces, shafts and<br>spindles                                                                                                                                                  | -<br>2327, 2328<br>1000, 2171<br>2200, 2201 | 1<br>1<br>1       | -        | Acetone  |

## Appendix manual ViscoTwin 130 HP 3A

Tools and expendables required for maintenance and servicing

Maintenance level 1 tools and expendables

| Description, Purpose<br><i>3<sup>rd</sup> party solution</i>                                                                                                                                    | Related position  | Maintenance level | eData-ID | Material |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------|-------------------|----------|----------|
| Thread-locking fluid Loctite blue 242<br><br><br>(or any other thread-locking fluid with identical properties) | -<br>2180<br>1008 | 1<br>3            | -        | -        |




### Maintenance level 2 tools

| Description, Purpose<br><i>3<sup>rd</sup> party solution</i>                                                                                                                                                       | Related position     | Maintenance level | eData-ID | Material |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------|-------------------|----------|----------|
| End cutting pliers to remove key 1183<br>                                                                                         | 1183                 | 2                 | -        | -        |
| Hexagon sockets for:<br>Bolts M12 Socket size: 18 mm<br>- Compatible with torque wrench drive<br>                                | 2177                 | 2                 | -        | -        |
| Allen key sockets for<br>Hexagon socket screw M5<br>Allen key size: 4 mm<br>Hexagon socket screw M8<br>Allen key size: 6 mm<br> | 2186<br>2258<br>1008 | 2<br>2<br>3       |          |          |
| Extension compatible with torque wrench drive and Allen key socket 6 mm<br>                                                     | 2258                 | 2                 | -        | -        |

## Appendix manual ViscoTwin 130 HP 3A

Tools and expendables required for maintenance and servicing



Maintenance level 2 tools
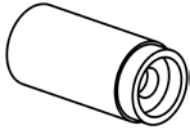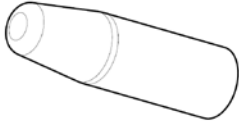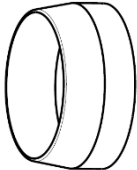
| Description, Purpose<br><i>3<sup>rd</sup> party solution</i>                                                                                                                                                                                                                                                  | Related position | Maintenance level | eData-ID | Material                |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------|-------------------|----------|-------------------------|
| Mandrel to press shaft sealing ring 1010 into <u>cast iron</u> gear housing<br>                                                                                                                                              | 1010             | 2                 | 12557    | AISI: 304<br>EN: 1.4301 |
| Mandrel to mount shaft sealing ring position 1010 in stainless gear housing (no picture available)                                                                                                                                                                                                            | 1010             | 2                 | 18777    | AISI: 304<br>EN: 1.4301 |
| Sleeve to protect shaft seal ring 1010 while mounting gear cover<br>                                                                                                                                                         | 1010             | 2                 | 12588    | AISI: 304<br>EN: 1.4301 |
| Sealing ring extractor<br>Removal of shaft sealing rings / position 1111<br><br><br><i>Solution:</i><br><i>Manufacturer or brand: Kukko</i><br><i>Name: Seal pulling set (gasket) in case</i><br><i>Part no: K-222-1/7</i> | 1111             | 2                 |          |                         |
| Sleeve to mount shaft sealing ring 1111 on shaft<br>                                                                                                                                                                       | 1111             | 2                 | 12570    | AISI: 304<br>EN: 1.4301 |





## Appendix manual ViscoTwin 130 HP 3A

Tools and expendables required for maintenance and servicing

Maintenance level 2 tools
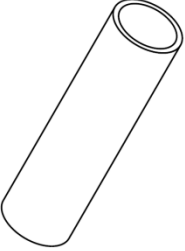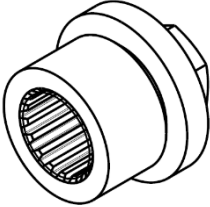
| <b>Description, Purpose</b><br><b>3<sup>rd</sup> party solution</b>                                                                                          | <b>Related position</b> | <b>Maintenance level</b> | <b>eData-ID</b> | <b>Material</b>         |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|--------------------------|-----------------|-------------------------|
| Installation pipe to press shaft sealing ring 1111 into bearing housing<br> | 1111                    | 2                        | 12563           | Aluminium               |
| Wheel puller to pull gear wheels 2184, 2183<br>                             | 2183, 2184              | 2                        | 12575           | AISI: 304<br>EN: 1.4301 |
| Socket to lock shaft to loose and tighten bolt 2177 and 1526<br>          | 2177, 1526              | 2                        | 12581           | AISI: 304<br>EN: 1.4301 |



### Maintenance level 3 tools
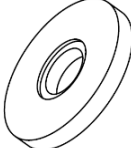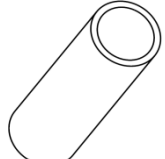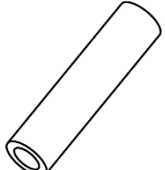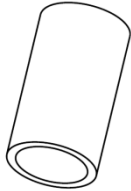
| Description, Purpose<br><i>3<sup>rd</sup> party solution</i>                                                                                | Related position | Maintenance level | eData-ID | Material                |
|---------------------------------------------------------------------------------------------------------------------------------------------|------------------|-------------------|----------|-------------------------|
| Pressure plate for needle bearing inner ring<br>           | 1003             | 3                 | 12545    | AISI: 304<br>EN: 1.4301 |
| Installation pipe for needle roller bearing outer ring<br> | 1529             | 3                 | 12560    | AISI: 304<br>EN: 1.4301 |
| Receptacle plate installation shaft ball bearing<br>     | 2181             | 3                 | 12548    | AISI: 304<br>EN: 1.4301 |
| Installation pipe for ball bearing inner race<br>        | 2181             | 3                 | 12551    | AISI: 304<br>EN: 1.4301 |
| Installation pipe for ball bearing outer ring<br>        | 2181, 1000, 2171 | 3                 | 12554    | AISI: 304<br>EN: 1.4301 |

## Appendix manual ViscoTwin 130 HP 3A

Tools and expendables required for maintenance and servicing

Maintenance level 3 tools
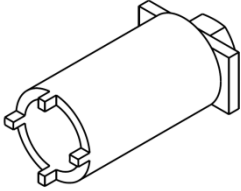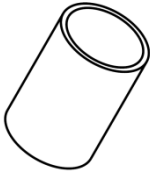
| <b>Description, Purpose</b><br><i>3<sup>rd</sup> party solution</i>                                                                         | <b>Related position</b> | <b>Maintenance level</b> | <b>eData-ID</b> | <b>Material</b>         |
|---------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|--------------------------|-----------------|-------------------------|
| Socket spanner for groove nut<br>                          | 1526                    | 3                        | 12578           | AISI: 304<br>EN: 1.4301 |
| Installation pipe for inner ring needle roller bearing<br> | 1009                    | 3                        | 18778           | AISI: 304<br>EN: 1.4301 |

Copyright © Processtec, Inc., Visalia, CA, USA, 2017

## Lubricants

### Gear oil

Since shipment of gear oil is related to high transportation costs (for safety reasons), Processtec, Inc. recommends that customer procures gear oil at a local representative / distributor for appropriate gear oils.

ViscoTwin requires gear oil meeting following requirements:

1. Complying with FDA guideline NSF-H1
2. Complying with ISO VG 220 viscosity specifications
3. 100 % synthetic. NO MINERAL OIL (neither 100 % nor partly)! Mineral oil may reduce interval time between oil change significantly.

Following products meet requirements specified above:

- Castrol Optileb Hy 68 (procurement information see below)
- Avia Food Gear 220
- Mobil DTE FM 220

#### Product numbers of Castrol Optileb Hy 68

| Packaging            | Castrol product numbers                       | eData-ID* |
|----------------------|-----------------------------------------------|-----------|
| 5 gal / 36.8 lb pail | 68949-AGPO CASTROL OPTILEB HY 68 36.8 LB PAIL | 18548     |
| 55 gal / 383 lb drum | 68949-AGDR CASTROL OPTILEB HY 68 383 LB DRUM  | 18549     |

\*) [www.edata-id.com](http://www.edata-id.com)

### Grease to lubricate shafts prior to mount spindles

Following grease is recommended by Processtec:

Basic requirement: Food grade NSF-H1  
 Brand: CASSIDA GREASE RLS 2  
 Manufacturer: Fuchs Lubritech GmbH  
 67661 Kaiserslautern / Germany  
 Contact, ordering: Fuchs Lubritech Co  
 17050 Lathrop Avenue  
 Harvey, Illinois 60426  
 Phone: +1 708-333-8900  
 Fax: +1 708-333-9180  
<http://www.fuchsus.com>  
[cassida.lubricants@fuchsus.com](mailto:cassida.lubricants@fuchsus.com)

#### Product numbers of Cassida Grease RLS 2

| Packaging                                   | MPN         | Designation          | eData-ID* |
|---------------------------------------------|-------------|----------------------|-----------|
| Case of 12 cartridges of 13.4oz (380g) each | 80142500085 | CASSIDA GREASE RLS 2 | 19017     |
| 41.8 lb (19 kg) pail                        | 80142500035 | CASSIDA GREASE RLS 2 | 19018     |

\*) [www.edata-id.com](http://www.edata-id.com)




|        |      | Einzelteilliste                | Parts list                  | Pièces détachées              |
|--------|------|--------------------------------|-----------------------------|-------------------------------|
| Pos.   | Qty. | Benennung                      | Description                 | Description                   |
| 1012   | 1    | Deckel                         | Cover                       | Couvrir                       |
| 1015   | 4    | Scheibe                        | Washer                      | Rondelle                      |
| 1016   | 4    | Sechskantschraube              | Hexagonal screw             | Vis à tête hexagonal          |
| 1029   | 1    | Dichtungsgehäuse               | Shaft seal housing          | Corps de garniture            |
| 1033   | 1    | Pumpengehäuse                  | Pump housing                | Corps de pompe                |
| 1041   | 4    | Sechskantschraube              | Hexagonal screw             | Vis à tête hexagonal          |
| 1064   | 2    | Gewindestift                   | Set screw                   | Vis sans tête                 |
| 1088   | 1    | O-Ring                         | O-ring                      | O-ring                        |
| 1303** | 2    | Gleitringdichtung (komplett)   | Mechanical seal (Complete)  | Garniture mécanique (complet) |
| 1400   | 1    | Grundplatte                    | Baseplate                   | Plateau de base               |
| 1473   | 1    | Antrieb                        | Drive unit                  | Entrainement                  |
| 1538   | 1    | Typenschild                    | Type plate                  | Plaque signalétique           |
| 2024   | 1    | Temperaturfühler               | Temperature sensor          | Sonde de température          |
| 2025   | 1    | Kabelverschraubung             | Cable gland                 | Passe-câble à vis             |
| 2174   | 4    | Fundamentblock                 | Fondation bloc              | Fondation bloc                |
| 2180   | 2    | Spindelschraube                | Spindle screw               | Vis de la broche              |
| 2192   | 1    | O-Ring                         | O-ring                      | O-ring                        |
| 2194   | 2    | O-Ring                         | O-ring                      | O-ring                        |
| 2196   | 2    | Passstift                      | Dowel pin                   | Goupille de serrage           |
| 2200   | 1    | Schraubenspindel, linksgängig  | Screw spindle, left handed  | Vérin, fileté à gauche        |
| 2201   | 1    | Schraubenspindel, rechtsgängig | Screw spindle, right handed | Vérin, fileté à droite        |
| 2204   | 1    | Kupplungsschutz (komplett)     | Coupling guard (complete)   | Garde de couplage (complet)   |

|        |      | Einzelteilliste             | Parts list                    | Pièces détachées                                |
|--------|------|-----------------------------|-------------------------------|-------------------------------------------------|
| Pos    | Qty. | Benennung                   | Description                   | Description                                     |
| 2205   | 4    | Sechskantschraube           | Hexagonal screw               | Vis à tête hexagonal                            |
| 2246   | 4    | Sechskantschraube           | Hexagonal screw               | Vis à tête hexagonal                            |
| 2247   | 1    | Kupplungsteil, Pumpe        | Clutch part, pump             | Élément d'accouplement, pompe                   |
| 2248   | 1    | Kupplungsteil, Antrieb      | Clutch part, drive            | Élément d'accouplement, Entraîner               |
| 2249   | 1    | Zahnkranz                   | Spider                        | Pignon                                          |
| 2254   | 1    | Getriebeöl                  | Gear oil                      | Huile à engrenages                              |
| 2259   | 2    | Passschraube                | Fitting screw                 | Vis de fixation                                 |
| 2260   | 2    | Scheibe                     | Washer                        | Rondelle                                        |
| 2261** | 2    | O – Ring Dichtungssatz      | O-ring seal kit               | Joint kit                                       |
| 2265   | 4    | Kontaktschutz Pumpe         | Contact protection pump       | protecteur de contact pompe                     |
| 2266   | 4    | Kontaktschutz Motor         | Contact protection motor      | protecteur de contact moteur                    |
| 2272   | 2    | Wellendichtring             | Shaft sealing ring            | Joint d'étanchéité de l'arbre                   |
| 2273   | 2    | Wellenschonhülse            | Shaft sleeve                  | Chemise d'arbre                                 |
| 2274   | 2    | Stützscheibe                | Support disk                  | Disque de support                               |
| 2275   | 2    | O-Ring                      | O-ring                        | O-ring                                          |
| 2276   | 1    | Lagergehäuse komplett       | Bearing housing complete      | Corps de palier complète                        |
| 2278*  | 4    | Fundamentblock              | Fondation bloc                | Fondation bloc                                  |
| 2279   | 4    | Sechskantschraube           | Hexagonal screw               | Vis à tête hexagonal                            |
| 2280*  | 4    | Sechskantschraube           | Hexagonal screw               | Vis à tête hexagonal                            |
| 2286   | 1    | Eingreifschutz              | Protection guard              | Dispositif protecteur                           |
| 2287   | 2    | Sechskantschraube           | Hexagonal screw               | Vis à tête hexagonal                            |
| 2320   | 2    | O-Ring                      | O-ring                        | O-ring                                          |
| 2321   | 2    | O-Ring                      | O-ring                        | O-ring                                          |
| 2322   | 2    | Wellendichtring             | Shaft sealing ring            | Joint d'étanchéité de l'arbre                   |
| 2323   | 2    | O-Ring                      | O-ring                        | O-ring                                          |
| 2324*  | 1    | Sicherungsblech             | Safety plate                  | Plaque de sujétion                              |
| 2325*  | 6    | Senkschraube                | Countersink screw             | Vis noyée                                       |
| 2327   | 2    | Verschleißteilsatz Dichtung | Set of wearing parts, sealing | Ensemble de pièces d'usure, garniture mécanique |
| 2328   | 2    | Verschleißteilsatz Dichtung | Set of wearing parts, sealing | Ensemble de pièces d'usure, garniture mécanique |

\* wenn erforderlich  
 \*\* LS: Lippendichtung  
 BC: doppeltwirkend  
 BF: einfachwirkend  
 BF+WDR: einfach  
 wirkend + Wellendichtring  
 mit Quench

\* if necessary  
 \*\* LS : Lip seal  
 BC: double acting  
 BF: single acting  
 BF+WDR :single acting  
 + shaft seal with quench

\* le cas échéant  
 \*\* LS : Joint à lèvres  
 BC: à double effet  
 BF: à simple effet  
 BF+WDR : à simple effet  
 + joint d'étanchéité avec quench

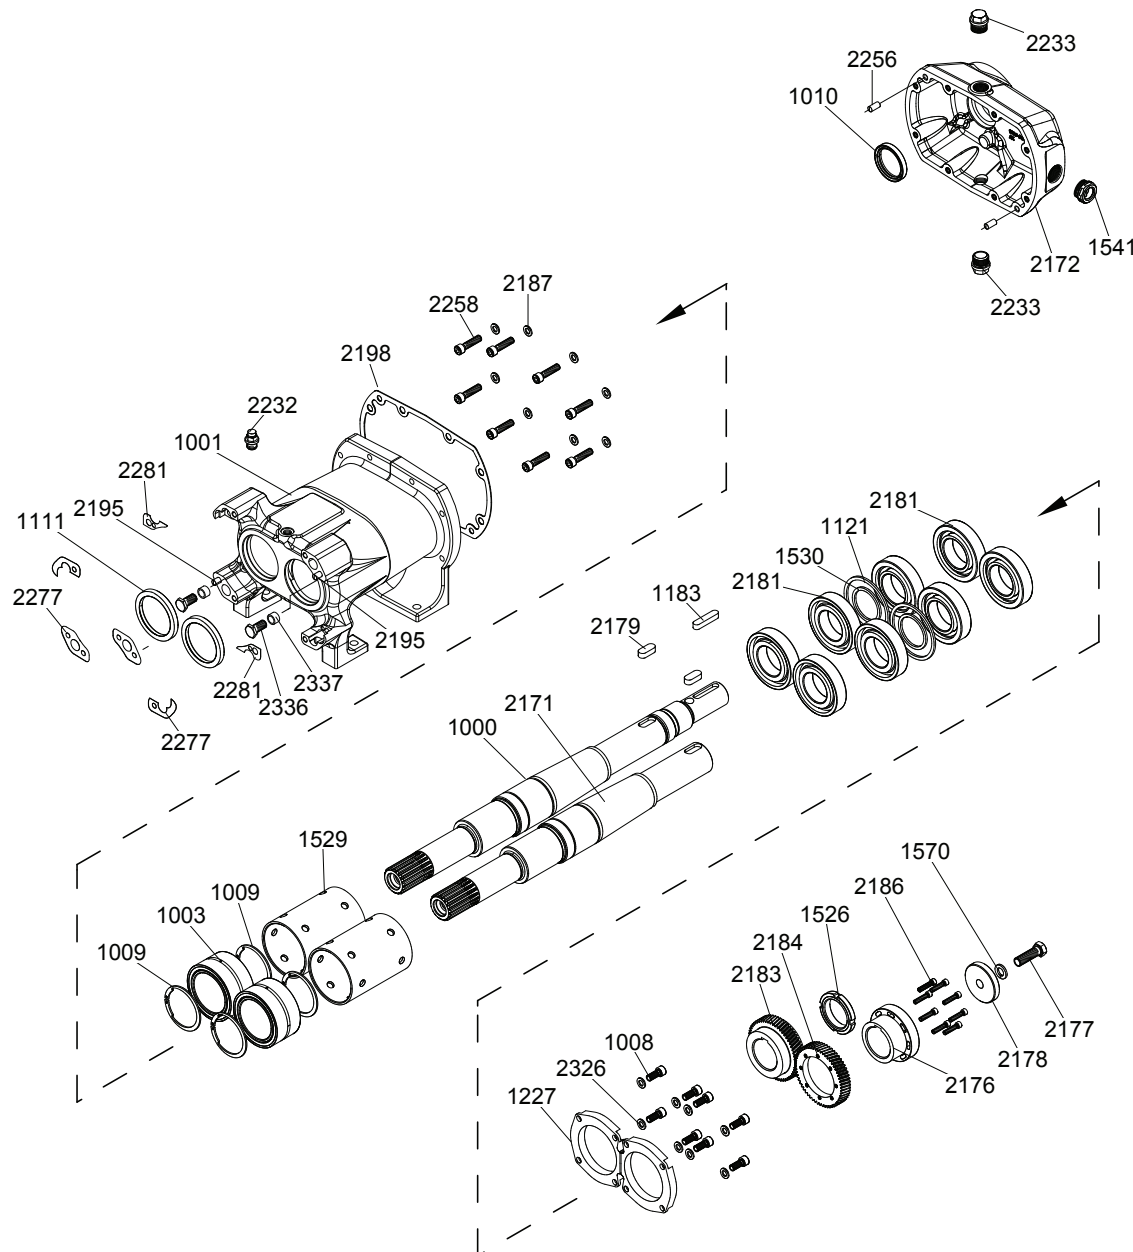

|         |      | Einzelteilliste     | Parts list             | Pièces détachées              |
|---------|------|---------------------|------------------------|-------------------------------|
| Pos-No. | Qty. | Benennung           | Description            | Designation                   |
| 1000    | 1    | Antriebswelle       | Drive shaft            | Arbre de commande             |
| 1001    | 1    | Lagergehäuse        | Bearing housing        | Corps de palier               |
| 1003    | 2    | Nadellager          | Needle roller bearings | Roulements à aiguilles        |
| 1008    | 8    | Zylinderschraube    | Socket head cap screw  | Boulon à six pans creux       |
| 1009    | 4    | Sicherungsring      | Snap ring              | Circlip                       |
| 1010    | 1    | Wellendichtring     | Shaft sealing ring     | Joint d'étanchéité de l'arbre |
| 1111    | 2    | Wellendichtring     | Shaft sealing ring     | Joint d'étanchéité de l'arbre |
| 1121    | 2    | Distanzring         | Distance ring          | Bague d'écartement            |
| 1183    | 1    | Passfeder           | Key                    | Clavette                      |
| 1227    | 2    | Lagerdeckel         | Bearing cover          | Chapeau de palier             |
| 1526    | 1    | Wellenmutter        | Groove nut             | Écrou en T                    |
| 1529    | 2    | Distanzhülse        | Spacer ring            | Manche                        |
| 1530    | 2    | Distanzring         | Distance ring          | Bague d'écartement            |
| 1541    | 1    | Ölstandsauge        | Oil level glass        | Voyant de niveau d'huile      |
| 1570    | 1    | Federring           | Spring ring            | Circlip                       |
| 2171    | 1    | Abtriebswelle       | Driven shaft           | Arbre de sortie               |
| 2172    | 1    | Getriebegehäuse     | Gear housing           | Logement d'entraînement       |
| 2176    | 1    | Nabe                | Driving collar         | Moyeu                         |
| 2177    | 1    | Sechskantschraube   | Hexagonal screw        | Vis à tête hexagonal          |
| 2178    | 1    | Spannscheibe        | Lock washer            | Plaque de serrage             |
| 2179    | 2    | Passfeder           | Key                    | Clavette                      |
| 2181    | 8    | Schräggugellager    | Angular ball bearing   | Roulements à contact oblique  |
| 2183    | 1    | Stirnrad Antrieb    | Spur gear, drift       | Engrenage, flottante          |
| 2184    | 1    | Stirnrad Abtrieb    | Spur gear, propelled   | Engrenage, actionnée          |
| 2186    | 8    | Zylinderschraube    | Socket head cap screw  | Boulon à six pans creux       |
| 2187    | 8    | Scheibe             | Washer                 | Rondelle                      |
| 2195    | 2    | Passstift           | Dowel pin              | Goupille de serrage           |
| 2198    | 1    | Flachdichtung       | Flat seal              | Joint                         |
| 2232    | 1    | Entlüftungsschraube | Breather plug          | Bouchon évent                 |
| 2233    | 2    | Verschlussschraube  | Plug screw             | Vis d'arrêt                   |
| 2256    | 2    | Passstift           | Dowel pin              | Goupille de serrage           |
| 2258    | 8    | Zylinderschraube    | Socket head cap screw  | Boulon à six pans creux       |
| 2277    | 4    | Kontaktschutz       | Contact protection     | protecteur de contact         |
| 2281    | 2    | Kontaktschutz       | Contact protection     | Protecteur de contact         |
| 2326    | 8    | Scheibe             | Washer                 | Rondelle                      |
| 2236    | 2    | Anschlagsschraube   | Stop screw             | Vis d'arrêt                   |
| 2237    | 2    | Silikonschlauch     | Silicone hose          | Tuyau en silicone             |

## The Engineering Design and Technical Construction File

### 4. CIP - SIP and COP Instructions, Swab-Testing Instructions

#### 4.1 CIP & SIP Instructions

Pumps in a processing system by 3A Standard (02-11)

Pumps used in a SIP processing system must be equipped with a pressure monitoring device, which shuts down the system immediately if the processed product falls below atmospheric pressure and the system cannot be re-started without getting sterilized again.

##### 4.1.1 C.I.P. – process

Are suitable for the materials of the pump:

Use 1 percent nitric acid solution at a temperature up to 82 ° C (acid)

or use a 1 percent solution of sodium hydroxide or sodium hypochlorite (200ppm) (alkaline)  
for your C.I.P. process.

For pump housings with chrome-wear coating pH values below 3 are not permitted. Therefore use an accordingly lower acid concentration when using the nitric acid solution for CIP Cleaning.

##### 4.1.2 S.I.P – process

Are suitable for the materials of the pump:

Sterilization over a period from 10 to 30 minutes with saturated steam at about 2.2 bars is allowed.

The maximum steam temperature for elastomeric materials in EPDM is 121° C.

The maximum steam temperature for elastomeric materials in FKM is 135° C.

If the equipment is installed in an aseptic processing system that is sterilized by heat and operated At a temperature of 250°F (121°C) or higher, 3-A Standard 02-11 requires that the system monitors Internal pressure and shuts the system automatically down if the product pressure in the system Becomes less that atmospheric. The system shall only be able to be restarted after it is re-sterilized.

|  |                                                                                                                                                                        |
|--|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <b>Warning!</b>                                                                                                                                                        |
|  | <p><b>Risk of injuries through rotating machine parts or from liquids escaping under pressure.</b></p> <p><b>Potential consequences: Severe or fatal injuries.</b></p> |

##### 4.1.3 Do not perform any work with the pump running!

**Disconnect the pump from mains and secure against inadvertent start up. (U-lock)**

**Use safety gloves and goggles when using aggressive detergents.**

4.1.3.1 Connect pump to CIP cleaning system or switch system.

4.1.3.2 Start cleaning system.

4.1.3.3 Cleaning pipe line system and pump.

4.1.3.4 Shut cleaning system, remove CIP medium completely.

|  |                                                                                                                                                                                             |
|--|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p><b>C.I.P. cleaning must conform to the hygiene of foodstuffs regulations as amended from time to time. The specifics pertaining to material stability must be strictly observed.</b></p> |
|  | <p><b>In case you have developed own C.I.P. cleaning methods for your pumping media, ensure pump suitability for the selected method by consulting the pump supplier.</b></p>               |

**ATTENTION**

**Possible damage to property**

Avoid abrupt changes in temperature during cleaning process with the pump in stationary state, fill in hot medium and wait until the pump has warmed up..

#### 4.2 Inspection of sanitary pumps for food processing.

The instruction given in chapter 7.2 'Notes on service and maintenance' apply exceedingly to sanitary pumps for food processing.


Then the spindle screws are to be checked every 100 operating hours. If contamination (underneath the O-ring) is detected, all parts in this sector which are in direct contact with the medium (spindle, spindle screw with O-ring) must be dismantled and thoroughly cleaned in an alcoholic bath. Clean and disinfect the shafts and all inner parts of the pump housing carefully with alcohol solution and a clean cloth. Renew the O-ring of the spindle screw 2194 and the O-ring 130 of the Inboard Rotor Holder 80 inside the mechanical seal. ( ☐ \_see Parts List)

Subsequently, no corrosion or seizure marks must be visible; otherwise the affected parts must be replaced.

If contamination on the mechanical seal outside the medium sector is detected after 500 cleaning cycles or one year at the latest, all component parts of the mechanical seal are to be thoroughly cleaned and disinfected in an alcohol bath. Replace all O-rings of the Inboard Rotor Holder (O-ring 90, 130, 140 and 220). ( ☐ \_see Parts List)


Subsequently, no corrosion or seizure marks must be visible; otherwise the affected parts must be replaced.

1. Remove Bolts from the Spindles and first visually test the cleanliness of the O-ring and the groove.
2. Visually check cleanliness of threads on the shaft

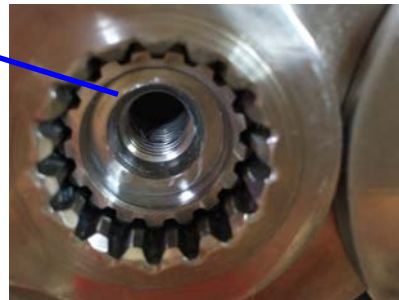

3. Remove O-Rings and clean bolts with FDA-compliant detergent. If needed sanitize with alcohol-bath
4. Remove residue from bolts with the use of a sturdy brush
5. Remove residue from the threads by spraying alcohol, blow it out with compressed air  
- hold a towel in front of the thread to protect yourself from spilling solution.
6. Wipe it with non-fuzzing paper towel dry and clean.
7. Now install NEW O-rings (3-A approved elastomers) and fixate with medium strength Loctite food grade, torqued to required value. (see Appendix "Torque-table")

Fully drainable pump housing due to machined DRAIN in the front cover. See picture below:

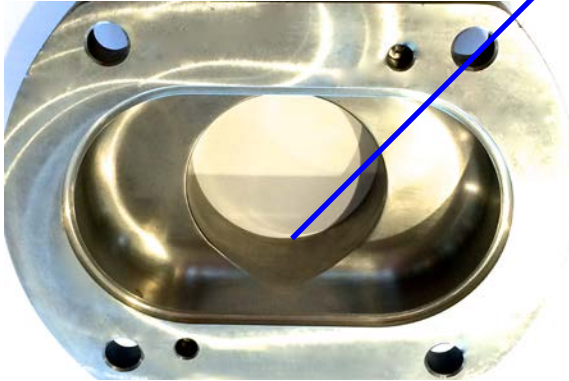

Make sure, drain shows to bottom when Mounting to the housing

#### **4.3 COP (manual cleaning) Instructions**

- 4.3.1 **Safety is first – DISCONNECT THE PUMP FROM THE POWER!**
- 4.3.2 Disconnect piping from the pump housing
- 4.3.3 Remove the 4 hexagon screws (Pos. 1016 on explosion drawing)
- 4.3.4 Remove the pump housing and manually wash it properly with FDA-compliant detergent. Avoid scratching pads. Rinse it with clear water.
- 4.3.5 Clean the impellers manually with non-scratching pad or sponge with FDA-compliant detergent  
Spin the shafts to clean the impellers from all sides. Rinse with clear water.

#### **4.4 Swab-Test**

- 4.4.1 **Safety is first – DISCONNECT THE PUMP FROM THE POWER!**
- 4.4.2 Disconnect piping from pump housing
- 4.4.3 Remove the 4 hexagon screws (Pos. 1016 on explosion drawing)
- 4.4.4 Remove pump housing carefully
- 4.4.5 Take swab-sample as per Lab-Instruction of food-safety instructions  
(This procedure may be vary based on customer's internal requirements)

#### **4.5 Switching on**

Check before switching on:

- 4.5.1 **Pump with drive safely installed and connected?**
- 4.5.2 **Connections sealing and connected stress-free?**
- 4.5.3 **Oil level checked?**

- 4.5.4 Quench fluid level OK?
- 4.5.5 Correct pressure set in case of a counter-pressure device?
- 4.5.6 Rotational direction checked?
- 4.5.7 Safety devices (covers and limit switches, safety valve) installed and checked for function?
  - 4.5.7.1 Before start up, check pump for contamination and foreign objects.
  - 4.5.7.2 Fully open pressure and suction-side valves.
  - 4.5.7.3 Fill pump with medium to enable suction safely.
  - 4.5.7.4 Switch on drive.

**4.6 When initially operating the pump, check to see whether it and the pipe lines are tight.**

#### Operation

|                                                              |                                                                                                                                                                                                                                   |
|--------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                              | <b>Warning!</b>                                                                                                                                                                                                                   |
|                                                              | <p>Do not operate against closed shut-off devices.<br/>                     Bursting of the pipe line or downstream system components is possible.<br/>                     Potential consequences: Severe or fatal injuries.</p> |
| Secure the pump through an approved overpressure protection. |                                                                                                                                                                                                                                   |
| <b>ATTENTION</b>                                             | Possible damage to property                                                                                                                                                                                                       |

## The Engineering Design and Technical Construction File

### 12. Gear Oil – maintenance

#### 12.1 Gear-Oil Type

Use only designated food – grade gear lubricant, such as:

- Castrol Optileb Hy 68
- AVIA AVIAFOOD GEAR 220
- Mobil Mobil DTE FM 220

#### 12.2 Fill-Level

Please take manual page 22 fig. 7-1 Oil-level gauge for reference.

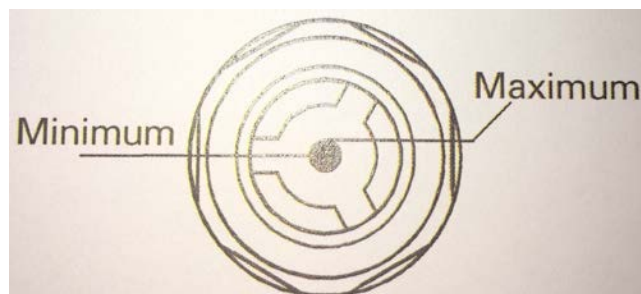


Fig. 7-1 Oil-level gauge

#### 12.3 First Oil Change:

First Oil Change is due after 250 hours of operation

#### 12.4 Check Oil Level:

Check Oil level at least weekly and top level up if necessary to Maximum level  
As per fig. 7-1 under point 12.2  
(turn pump off, wait 3 min. to cool down the oil to show the actual level in the sight glass of the level gauge)

#### 12.5 Oil changes

Oil changes have to take place every 3000 hours of operation

In case the oil shows color-changes, oil has to be changed immediately and the change rhythm has to be adjusted based on the need through excessive use of the pump.

**General recommendation: Please put the recommended maintenance routine of the Manual on page 21 to set up a service-routine for your ViscoTwin.**

**Your Pump will show its great performance for a longer time on a high level.**

# Tightening torque values ViscoTwin 130

